

KOALA


L I V I N G

Assembly Instruction


Product Name: Portobello Dresser

Hardware List

A		Allen Bolt (G) M6x70mm	2 pcs
B		Allen Bolt (G) M6x30mm	8 pcs
C		Washer (G) Ø6xØ16mm	8 pcs
D		Washer (G) Ø6xØ13mm	2 pcs
E		Screw (G) M4x40mm	10 pcs
F		Dowel M8x30mm	12 pcs
G		Allen Key (G) 4mm	1 pc

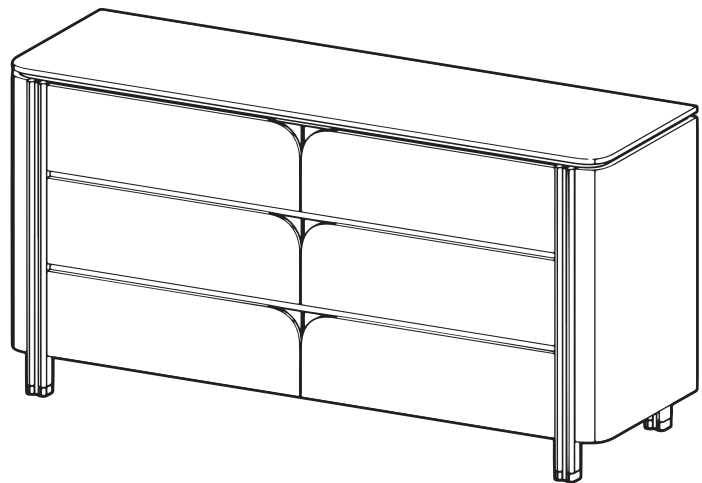


Parts List

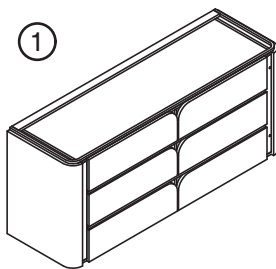


Base
1 pc



Support
2 pcs

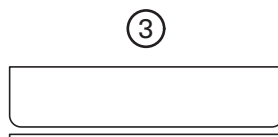


Top
1 pc

 

Leg
2 pcs




Middle Leg
1 pc

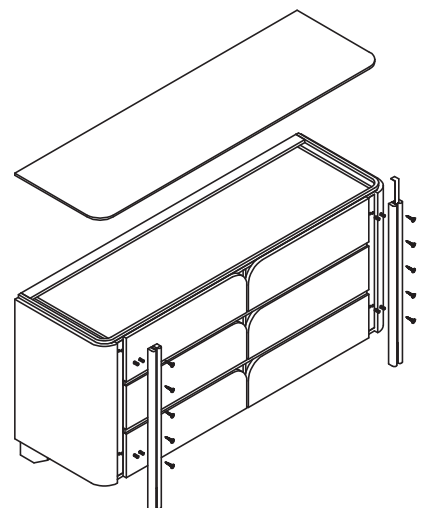


Note

1. Please check that all required hardware for assembly, as listed in the instructions, is available before beginning assembly.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Do not discard any packaging materials until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.


1

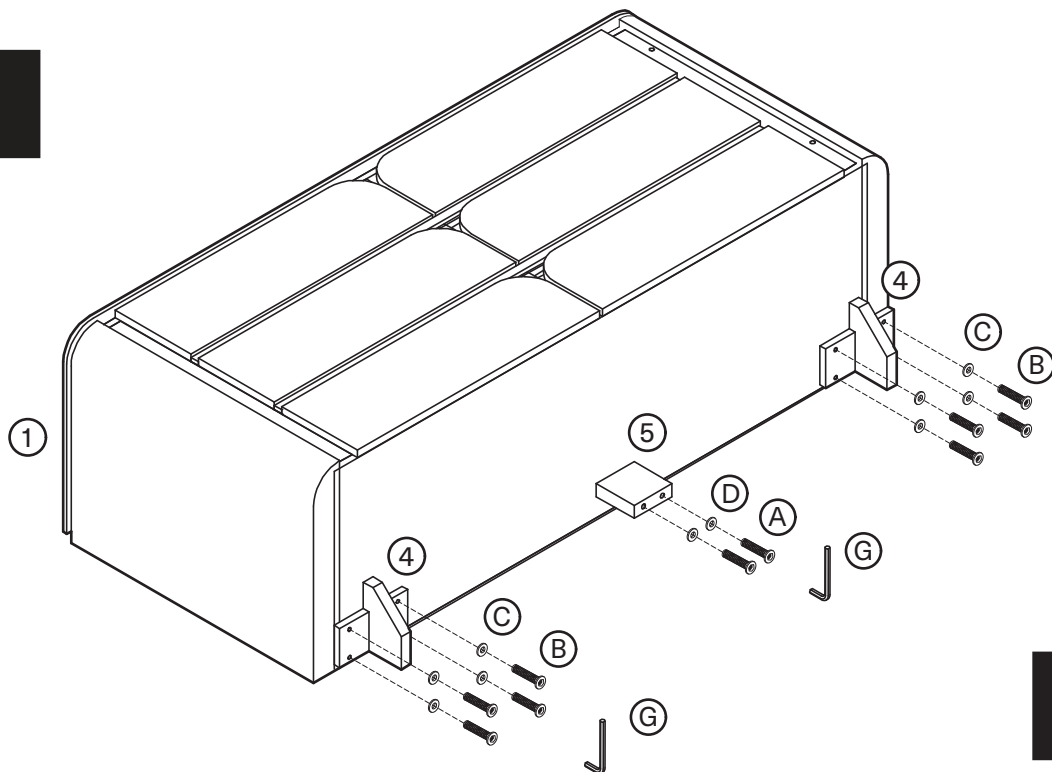


2

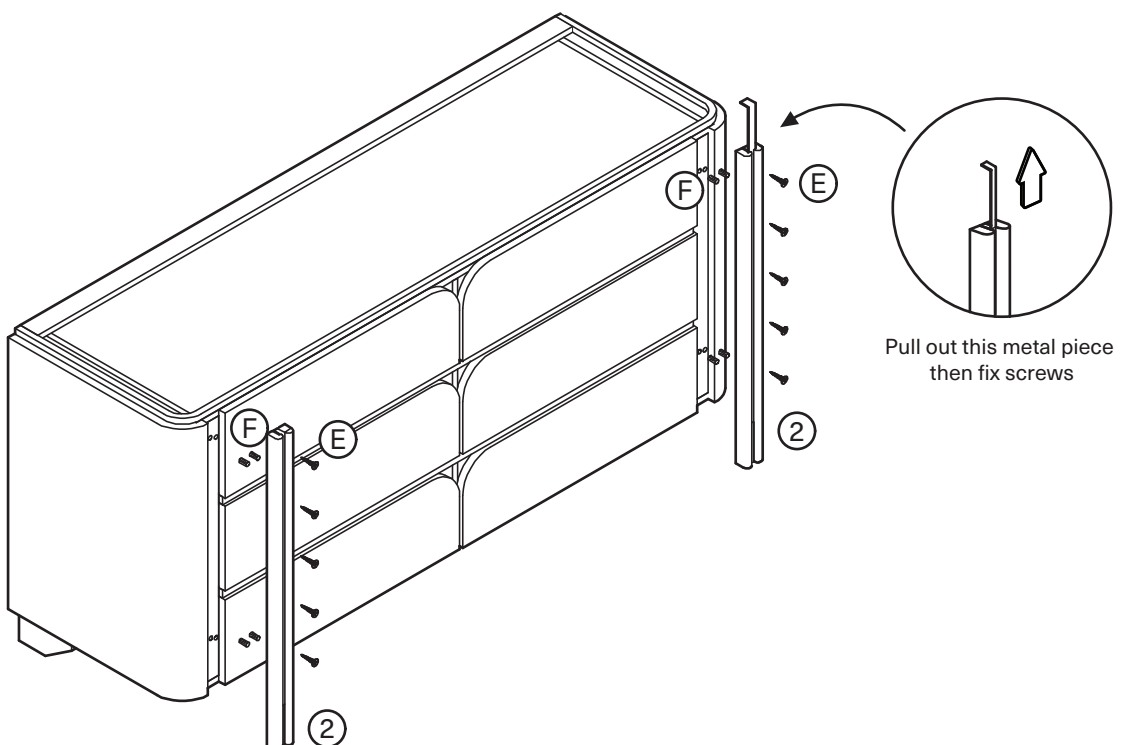

3

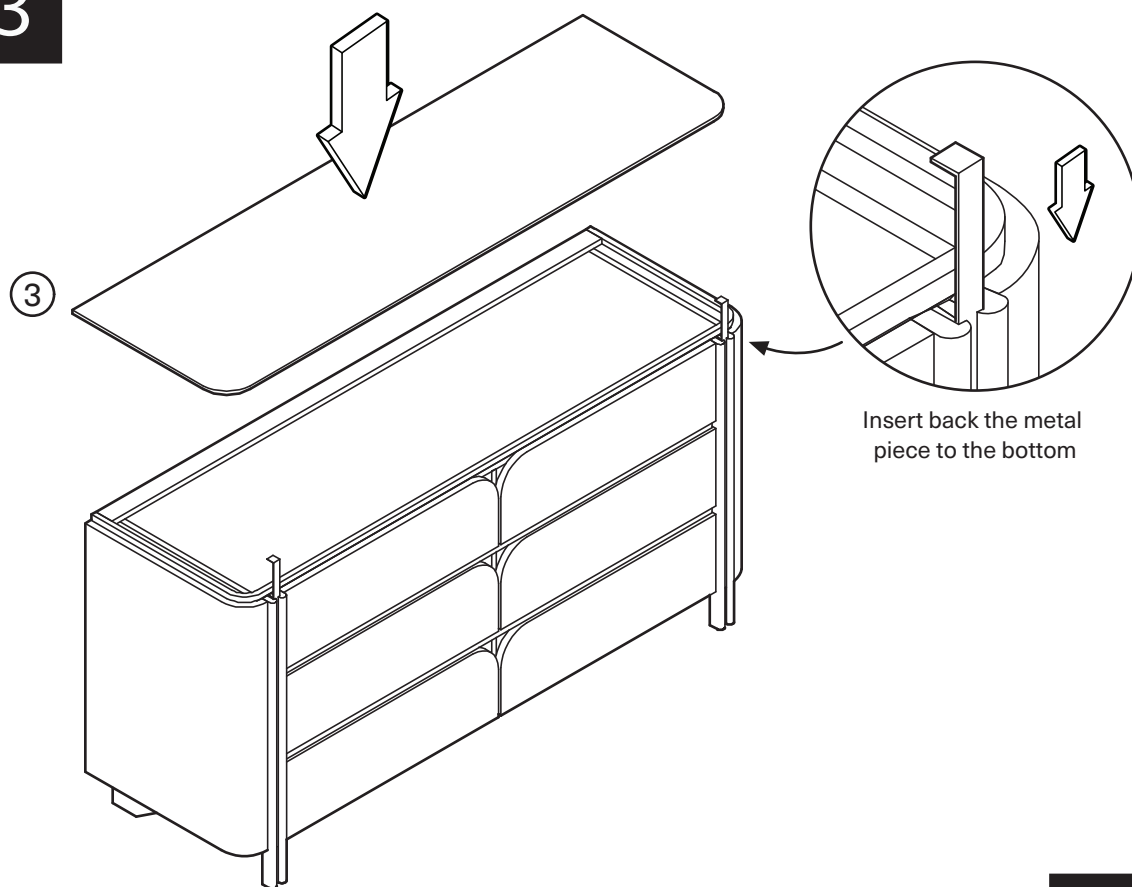


4

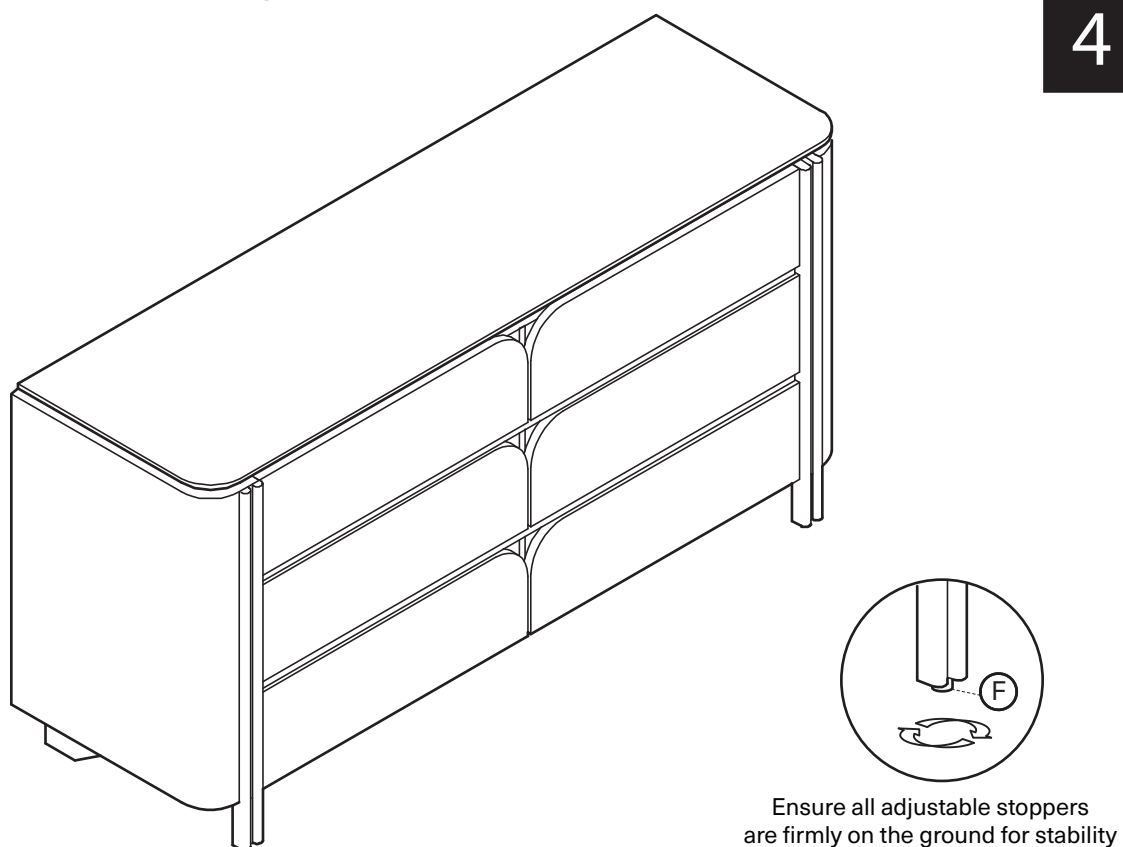

Anti-Tip Fixing Kit Assembly Instruction

A			4PCS
B			2PCS
C		M4x35mm	4PCS
D			4PCS
E		M4x16mm	4PCS

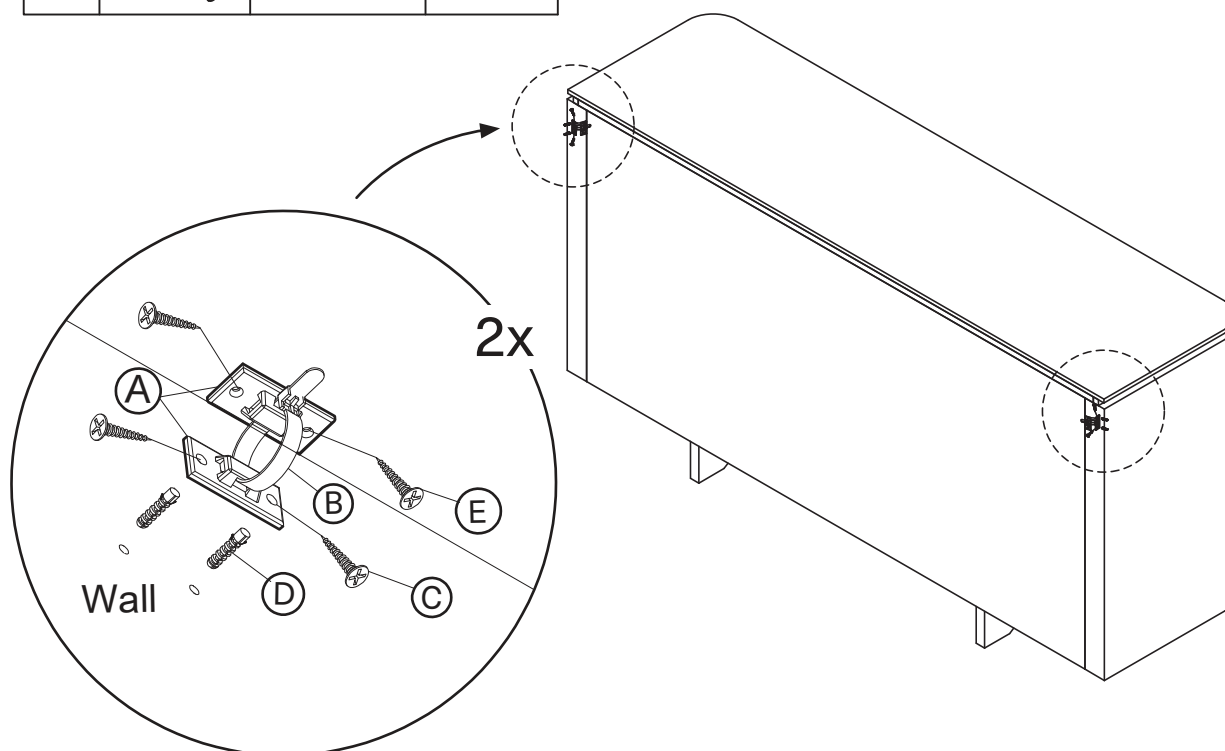

If the Anti-Tip Fixing kit is not completed, this voids any warranty

⚠ Warning

- ALWAYS secure this furniture with an anchor device
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves
- ALWAYS secure your television with an anchor device

