

 
KOALA


L I V I N G

Assembly Instruction


Product Name: Errol Dining Chair

Hardware List

- | | | | |
|---|--|----------------------------|-------|
| A |  | Allen Key
6mm | 1 pc |
| B |  | Allen Bolt (S)
M8x55mm | 4 pcs |
| C |  | Allen Bolt (S)
M8x45mm | 4 pcs |
| D |  | Spring
Washer (S)
M8 | 8 pcs |
| E |  | Washer (S)
M8 | 8 pcs |

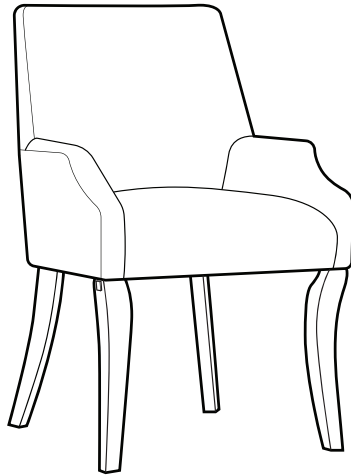

Parts List

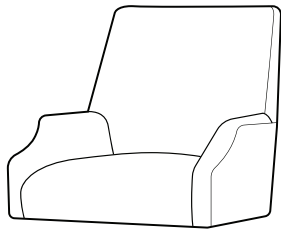

Seat
1 pc




Leg A
1 pc



Leg B
1 pc





Leg C
2 pcs

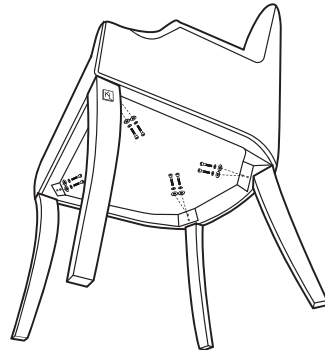


Note


1. Please check that all required hardware for assembly, as listed in the instructions, is available before beginning assembly.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Do not discard any packaging materials until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.
6. A drill may be used, but only on a LOW setting to avoid damage.

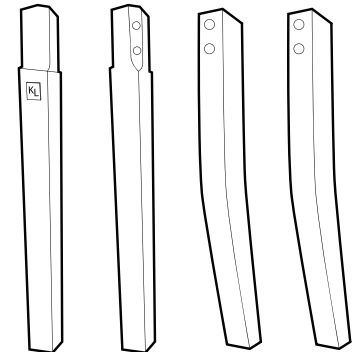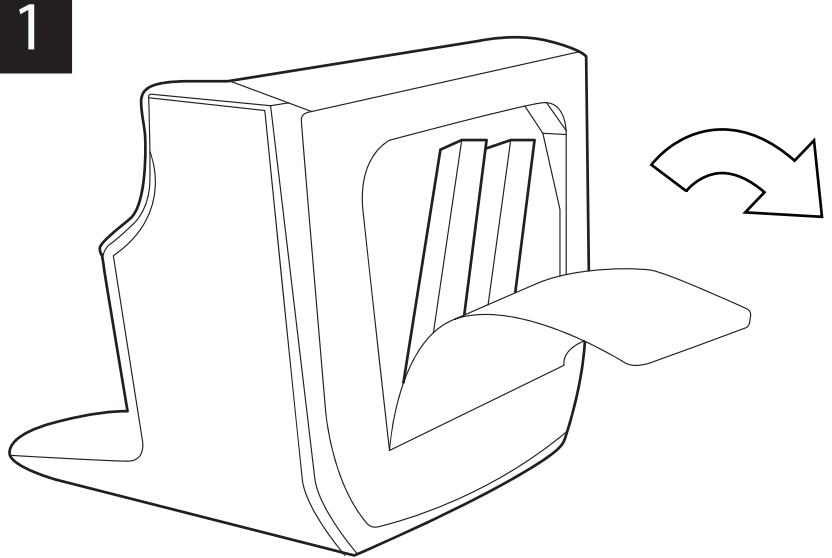


2

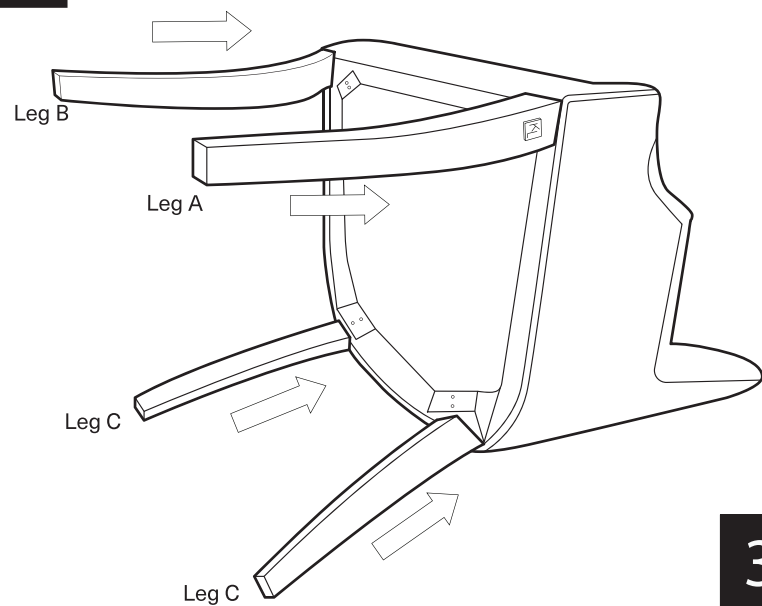

3

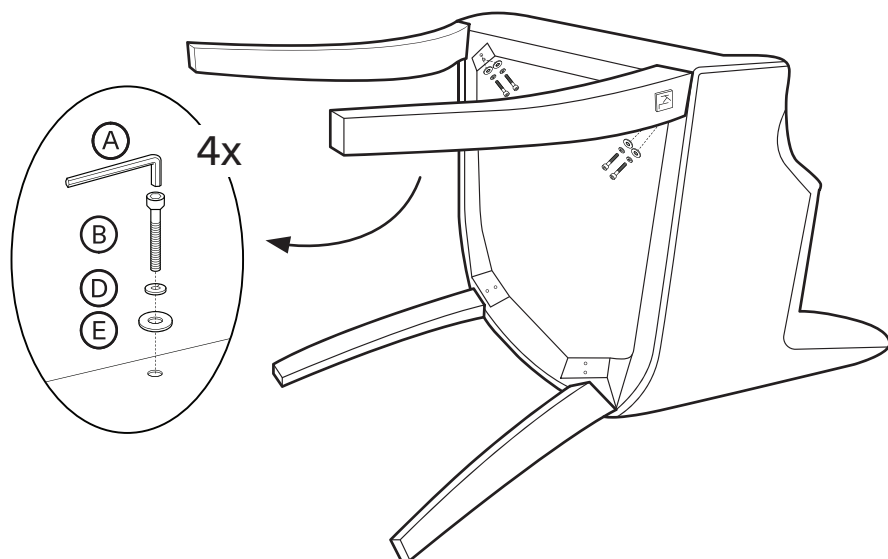

4

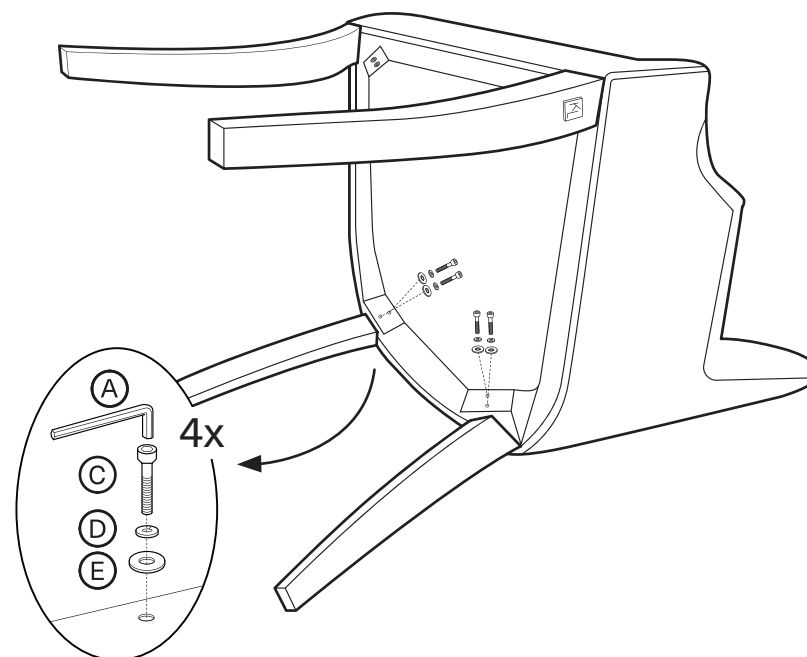

- Place the chair on an even surface.
- Put a load of approx. 60KG on to the seat.
- Adjust until all 4 legs are level - before you carefully tighten the screws.
- NOTE! The screws must be tightened after a period of use, and thereafter as required

