

KOALA

L I V I N G

Assembly Instruction




 

Product Name: Thames Entertainment Unit

Hardware List

- | | | | |
|---|---|-------------------------------|-------|
| A |  | Allen Key
5mm | 1 pc |
| B |  | Allen Bolt (S)
M8x10mm | 6 pcs |
| C |  | Hex Rivet (S)
M8x25mm | 4 pcs |
| D |  | Threaded Bolt (G)
M8x340mm | 4 pcs |




Parts List

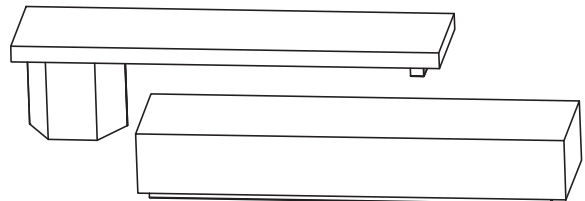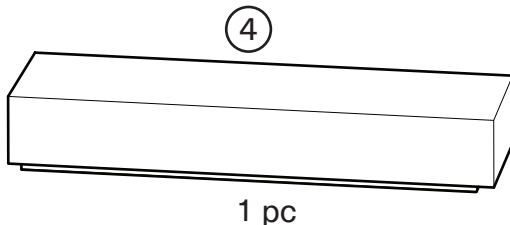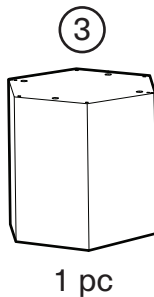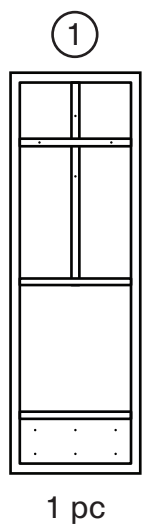


Note

1. Please check that all required hardware for assembly, as listed in the instructions, is available before beginning assembly.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Do not discard any packaging materials until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.
6. A drill may be used, but only on a LOW setting to avoid damage.


1

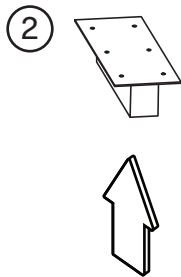


The small metal part is fastened underneath the stonebase on the K2 box, with red label attached. Please take it out first when unpacking.

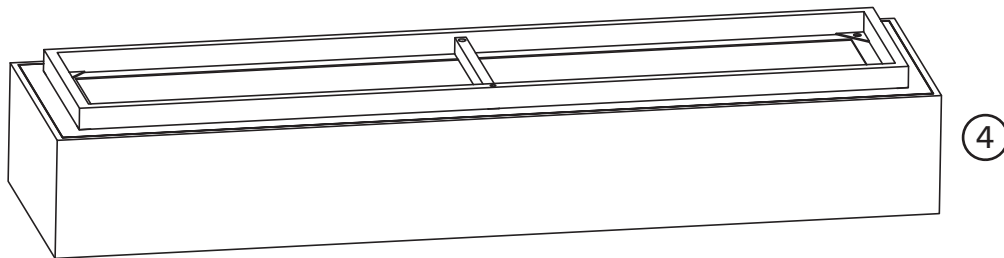


2

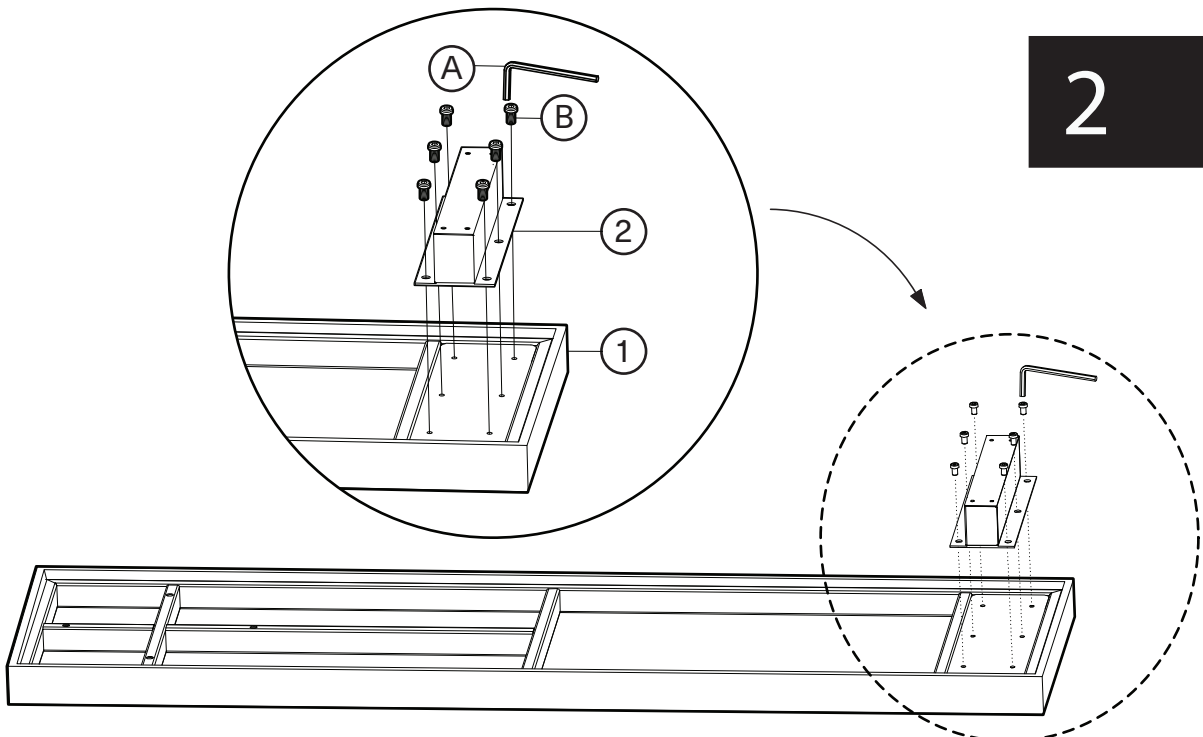


3

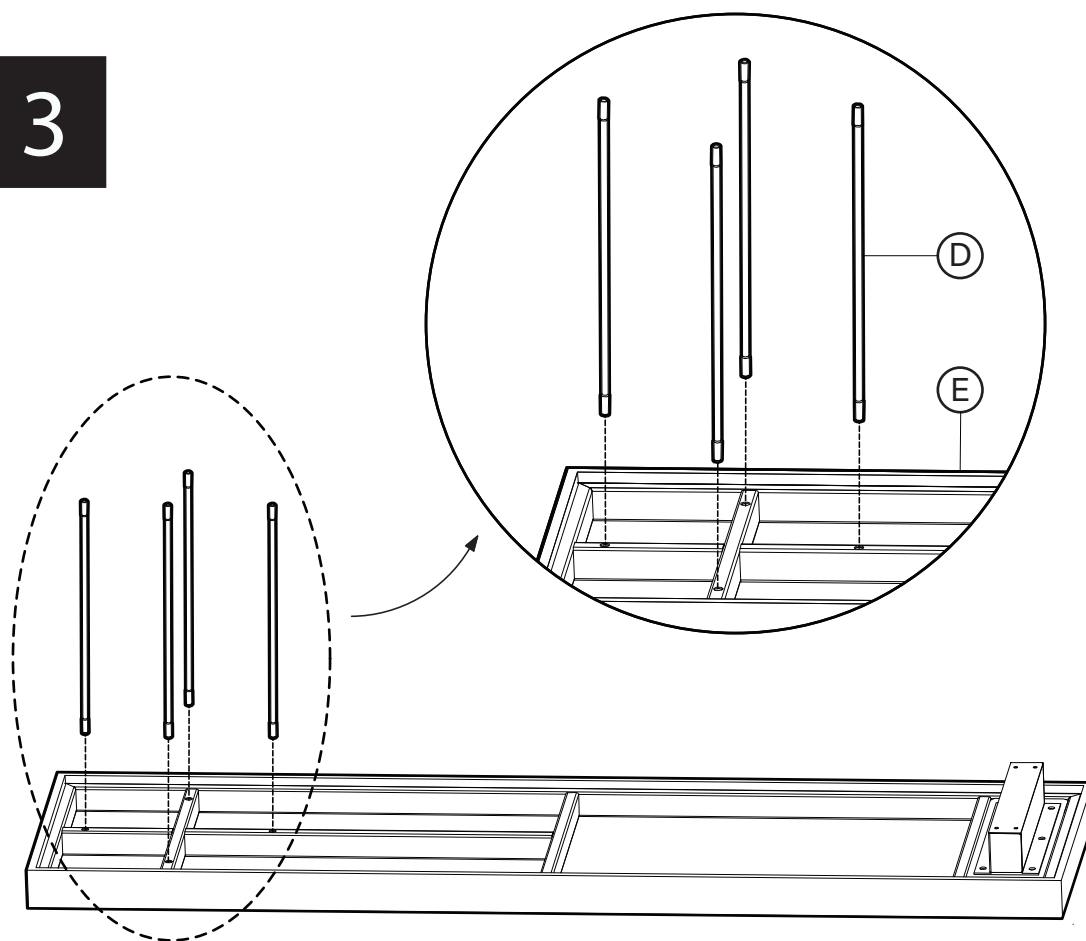


4

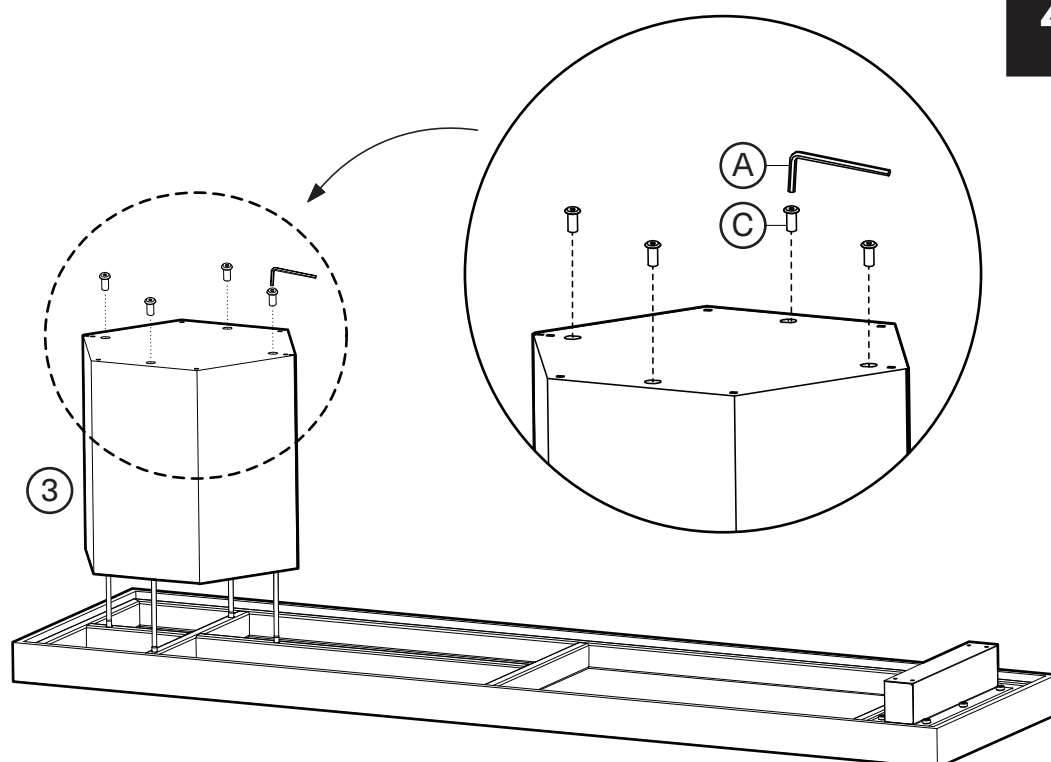

5

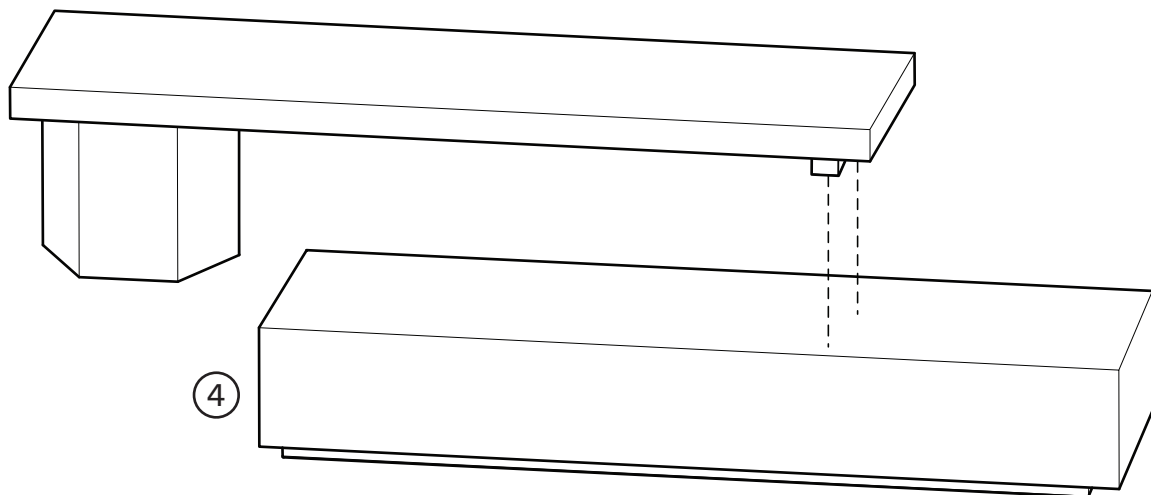

6

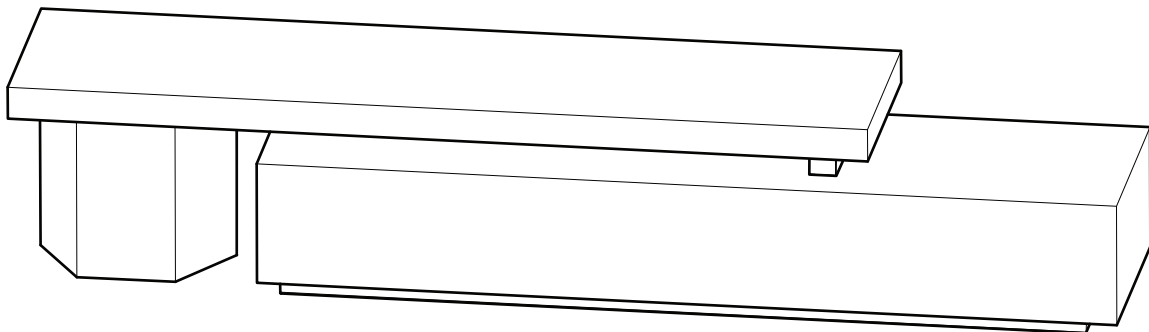

⚠ Warning

1. Never allow children to stand, climb or hang on drawers, doors, or shelves
2. ALWAYS secure your television with an anchor device

