

KOALA


L I V I N G




Assembly Instruction

Product Name: Bubbles Transparent Glass Chandelier 80 cm - Frosted Black Metal Body
 Product Id: 129059

Hardware List		
A		Expansion Screws 2 pcs
B		Tapping Screws 2 pcs
C		Expansion Screws 2 pcs
D		Wire Fixing Device 2 pcs
E		Tapping Screws 2 pcs
F		G9 Bulb (Not Included) 17 pcs



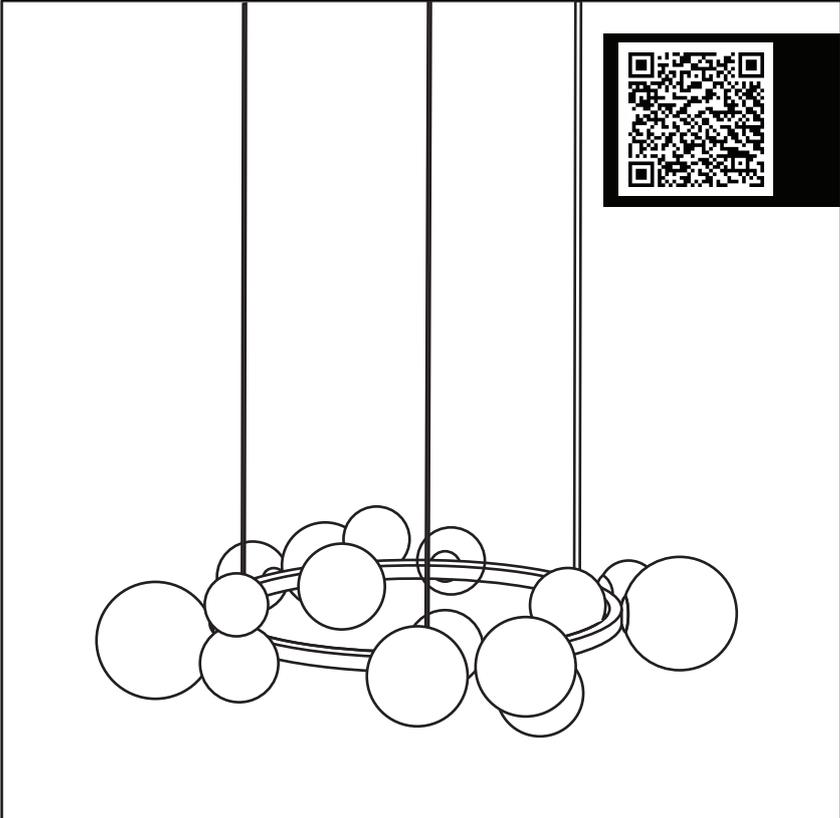

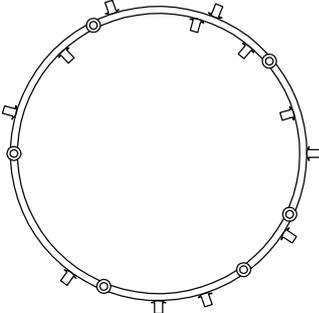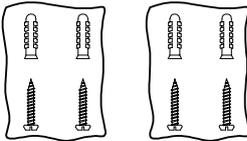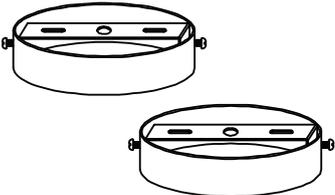Part List			
			
	Ø150 Shade 2 pcs	Ø120 Shade 4 pcs	Ø100 Shade 6 pcs
Lamp Body 1 pc			
	Install Parts 2 Bag		Mounting Box 2 pcs
			
			Pull Clasp 1 pcs

Note


1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.
6. Wear gloves when installing the lampshade.

1




Electrical products can cause serious harm. Installation and maintenance must be done by a qualified electrician only.

- Turn off the main power

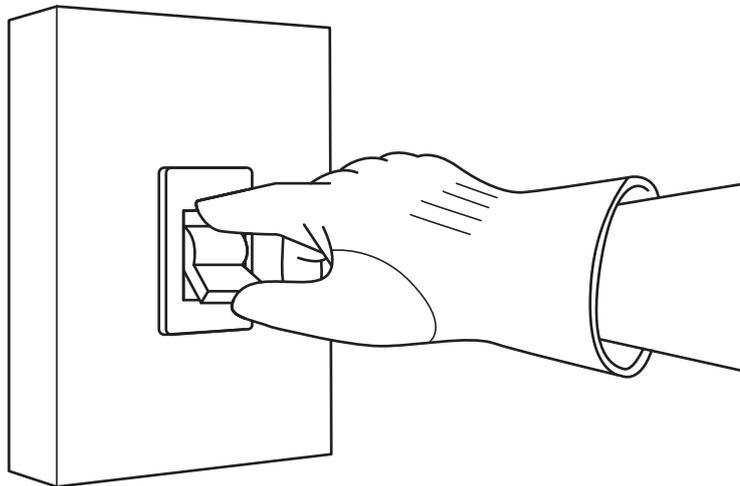


2

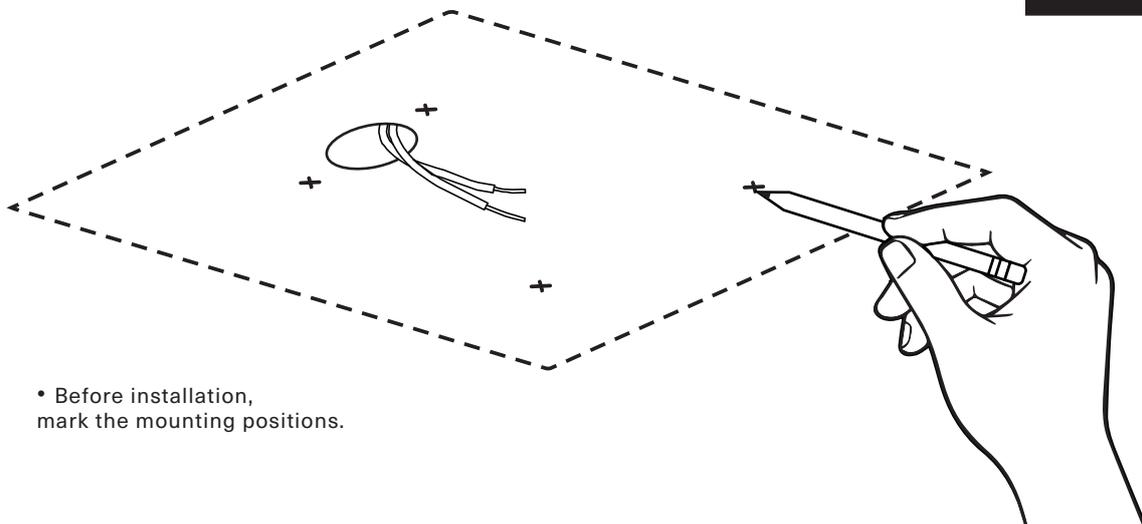

- Before installation, mark the mounting positions.

3

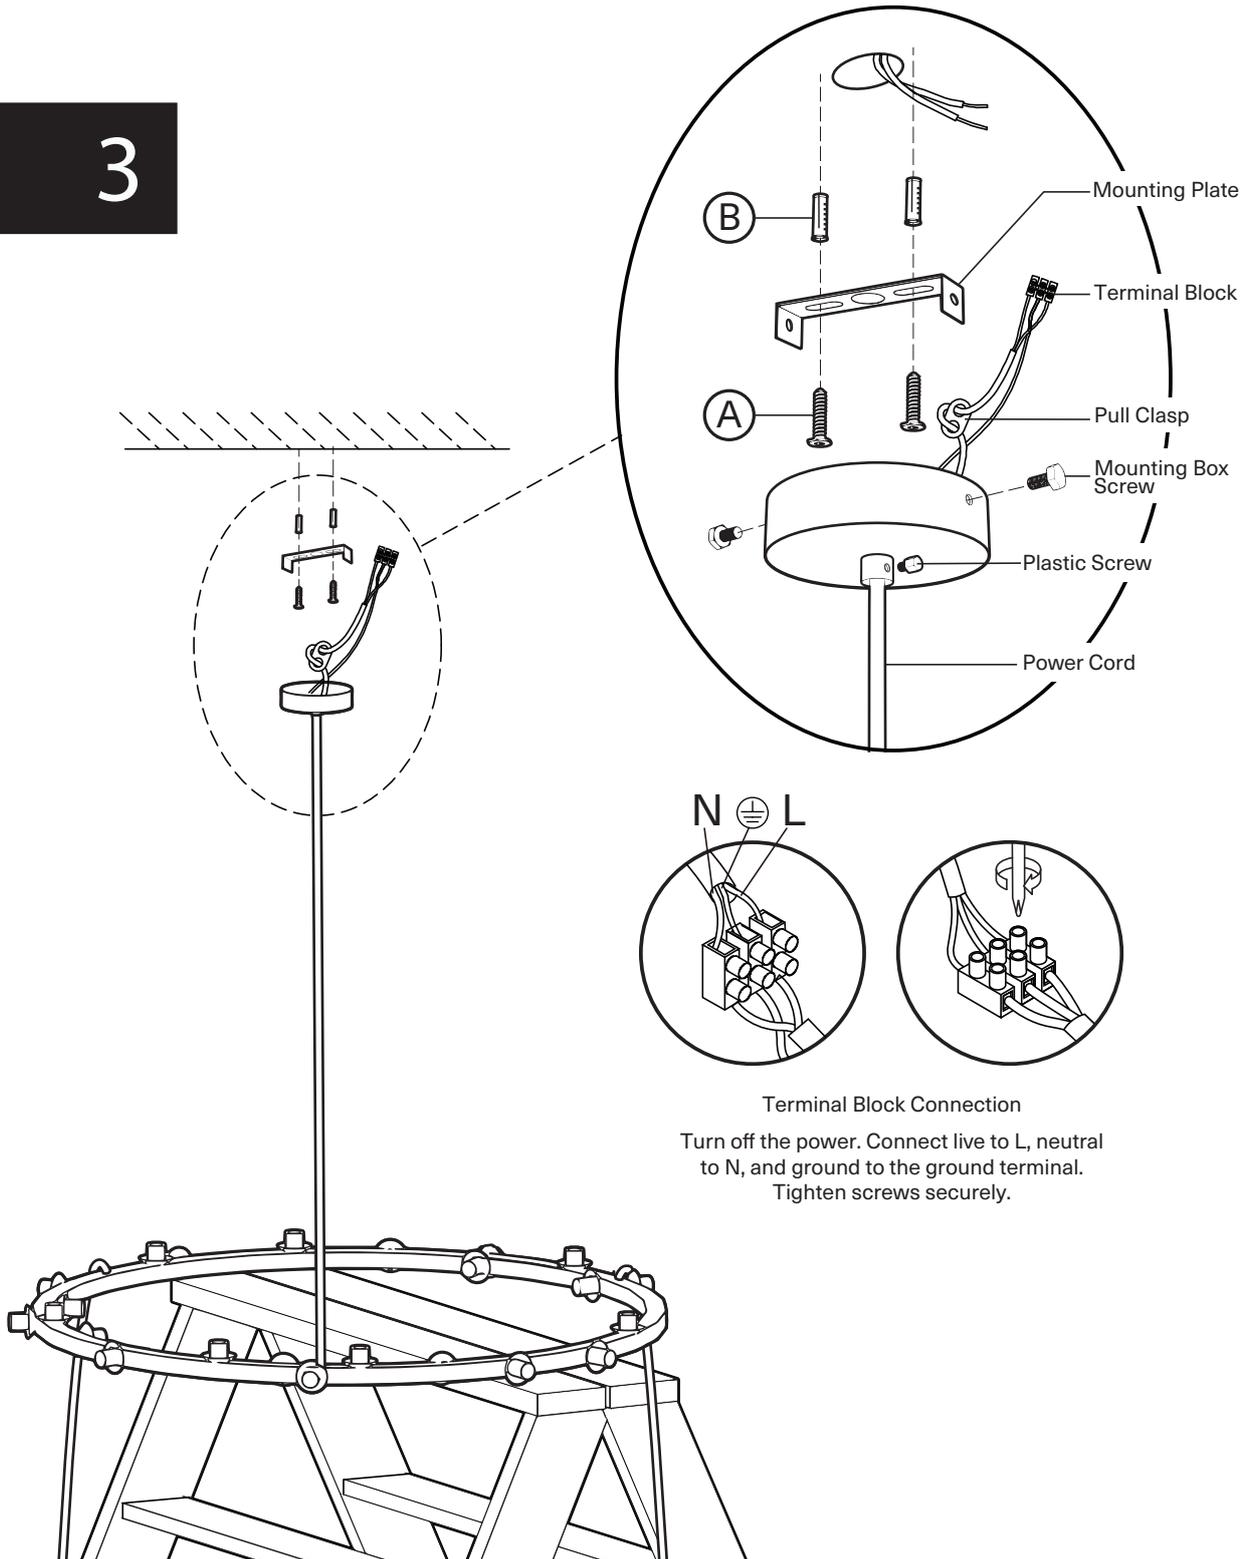

- Adjust and secure the power cord using the plastic screw and pull clasp.
- Install expansion screws (A) in the ceiling.
- Fix the mounting plate with tapping screws (B).
- Turn off the power and connect wires to the terminal block.
- Secure the mounting box with the mounting box screw.

Fig. A






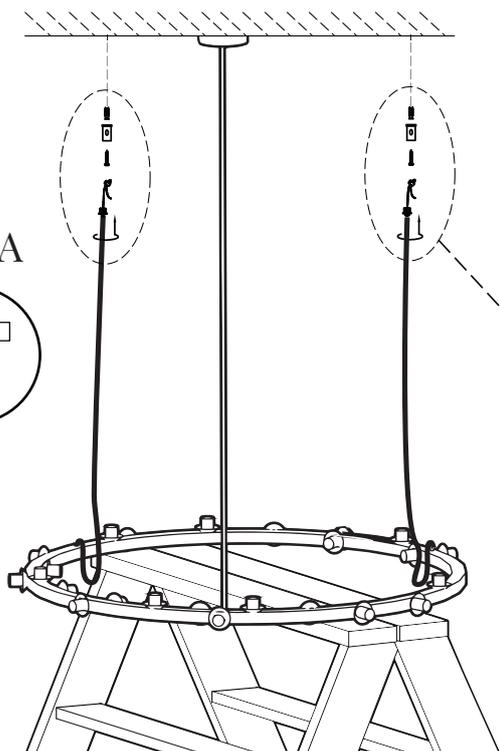


Fig. B

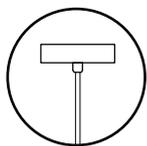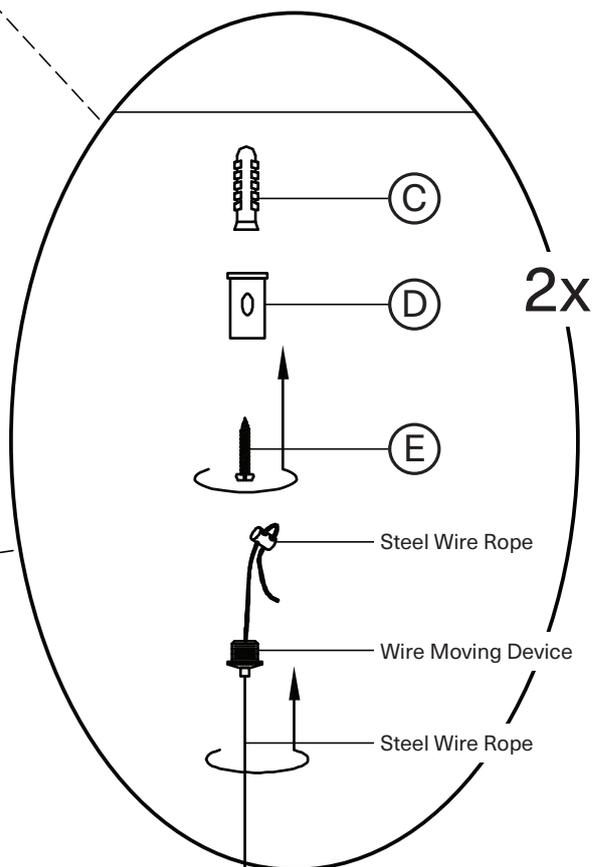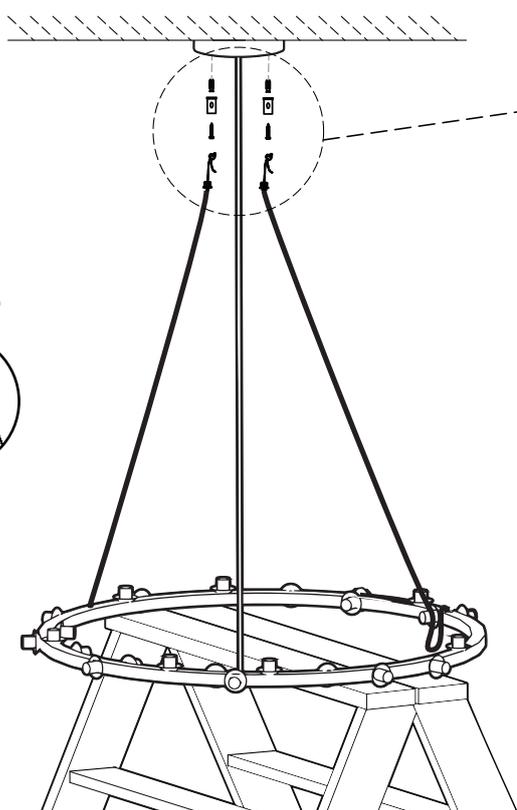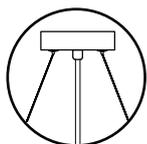

- The product has two installation methods: As shown in Figures A and B, you can choose either installation method.
- Secure the wire fixing device (D) to the expansion screw (C) using the tapping screw (E).
- Thread the steel wire rope through the gripper and adjust it to the desired height.
- Ensure the safety catch is engaged to prevent the wire from slipping and to keep the lamp body perfectly level.

5

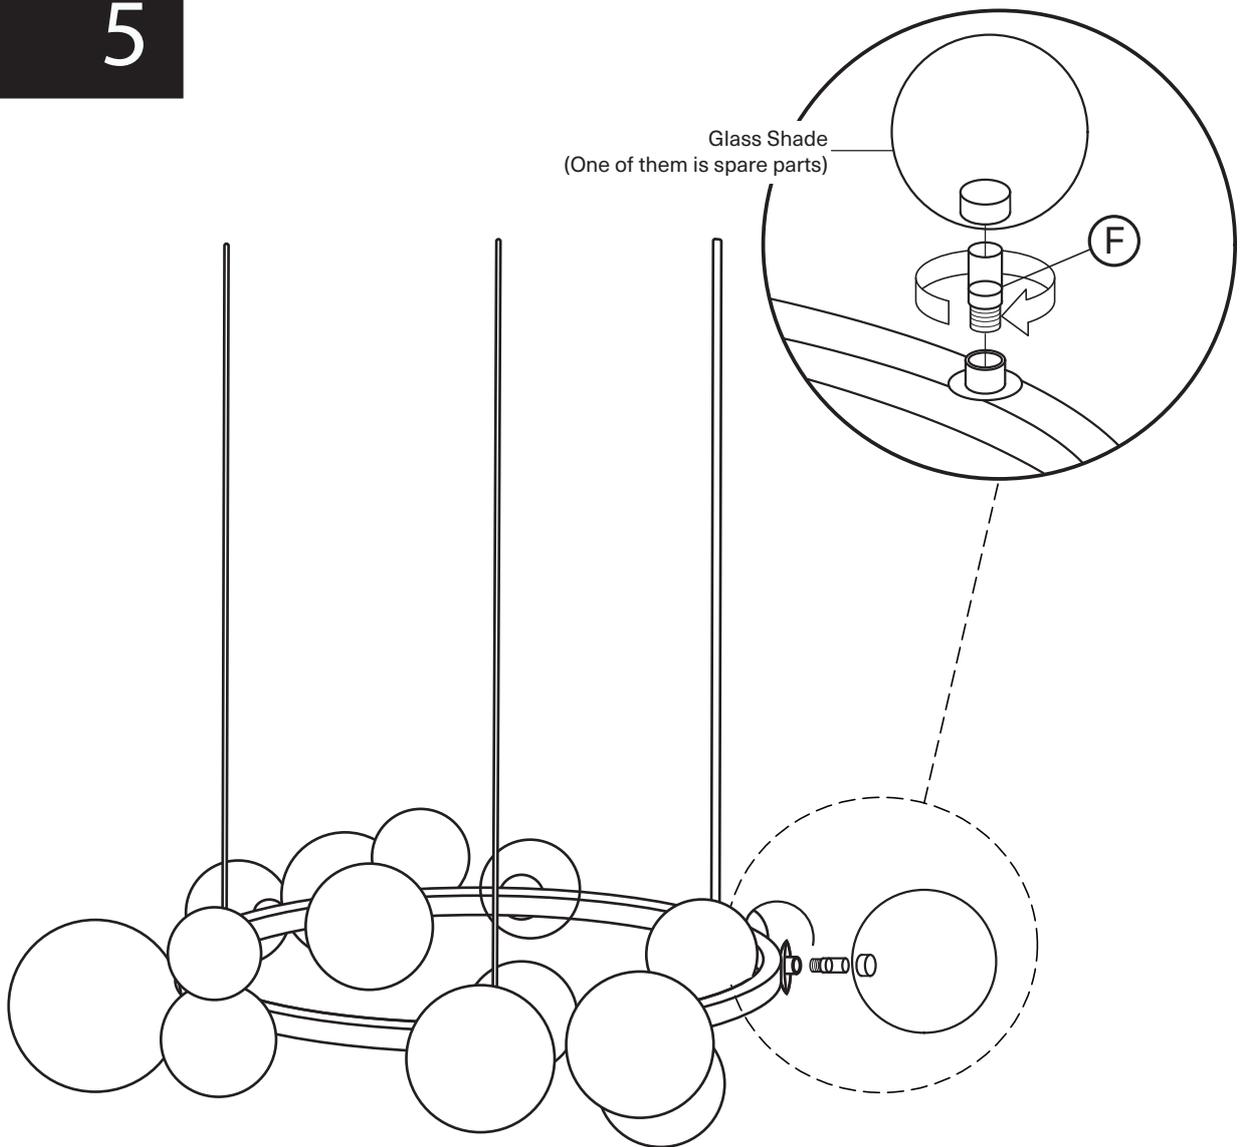

- Install the bulb (not included) and attach the glass lampshade.

230-240V a.c, 50Hz 24*G9; Max.7W ta:25°C

If the external flexible cable or cord this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

