

KOALA


L I V I N G

Assembly Instruction


Product Name: Montana Wooden Dresser

Hardware List

A		Screw (S) M8.5x20mm	1 pc
B		Screw (S) M8x52mm	1 pc
C		Nylon Restraint Strap	1 pc
D		Mounting Brackets	2 pcs

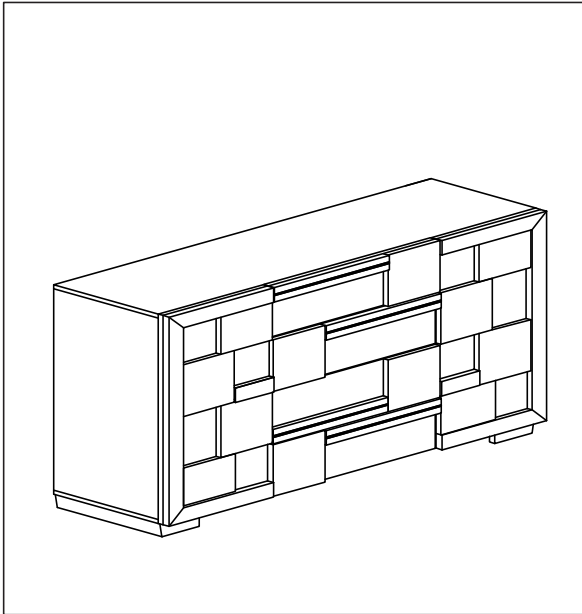

Parts List

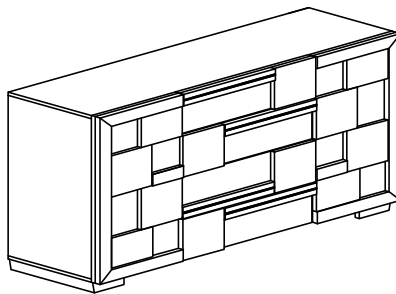


Dresser
1 pc

Note


1. Please check that all required hardware for assembly, as listed in the instructions, is available before beginning assembly.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Do not discard any packaging materials until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.

1

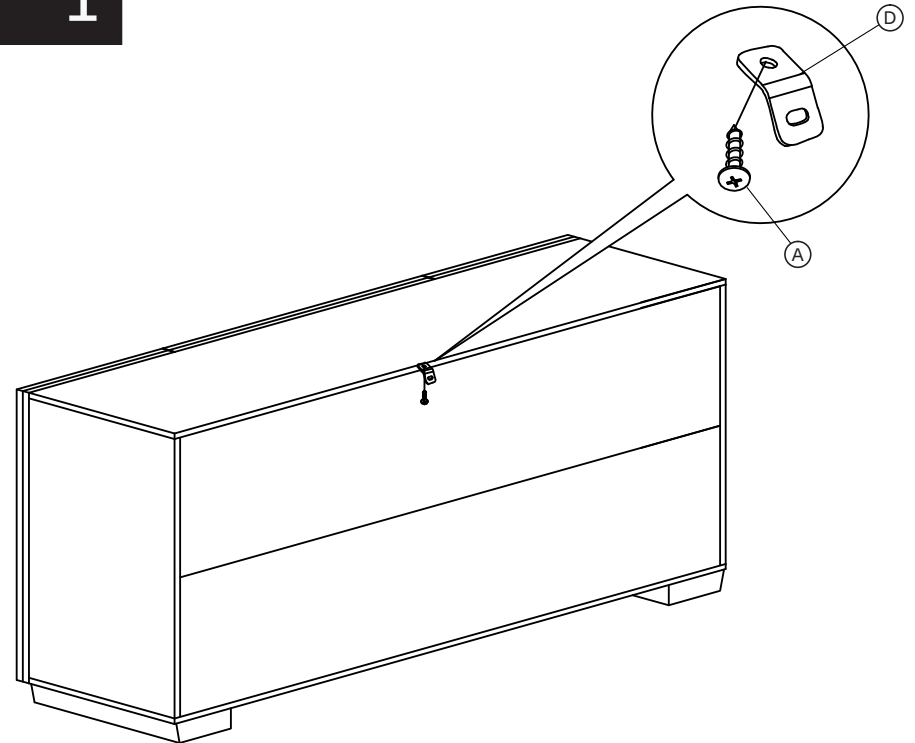

Attach (D) Mounting Bracket to the back top rail of the side table using the (A) Short Cabinet Screw (M8.5 × 20MM) through the smaller hole.


2

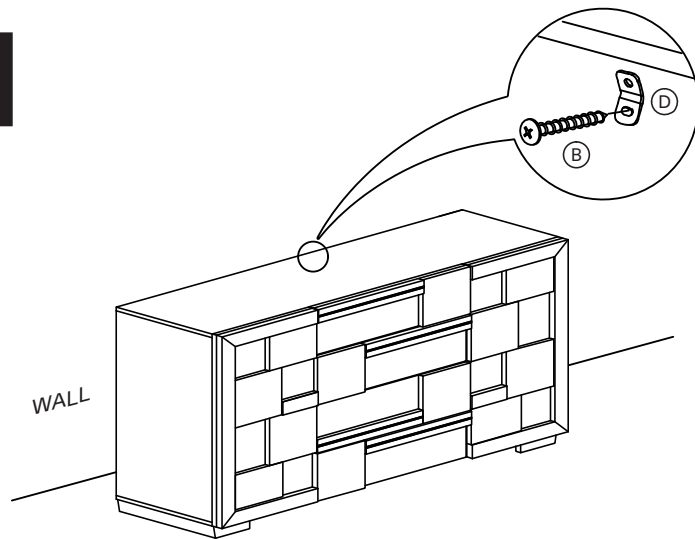

Locate the second (D) Mounting Bracket on the wall.
Position it over a wall stud, 2 inches below the (D) Mounting Bracket on the back of the unit.

Secure the wall bracket using the (B) Long Cabinet Screw (M8 × 52 mm).
Insert the screw through the smaller hole in the bracket.

3

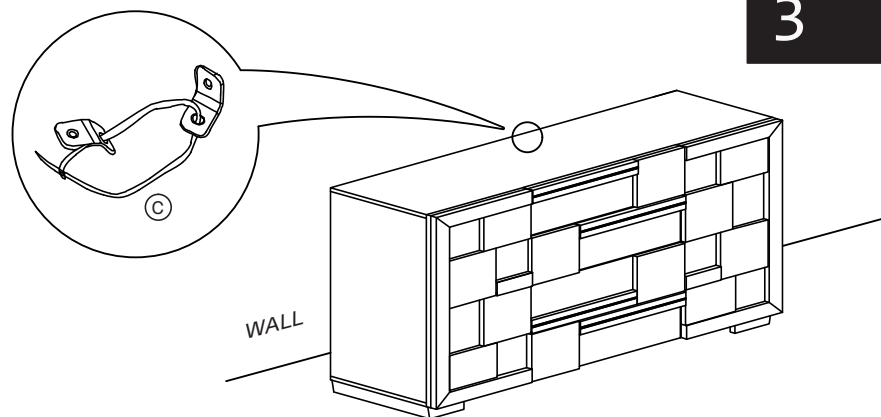

Thread (C) Restraint Strap through the mounting brackets. Join both ends and insert the flat end into the lock. Pull to tighten. Check that the strap is secure and locked in place.