


KOALA


L I V I N G

Assembly Instruction

Product Name: Poppy King/Queen Bed

Hardware List


- | | | | |
|---|---|---------------------|--------|
| A |  | Allen Bolt M8X35mm | 36 pcs |
| B |  | Allen Wrench 5mm | 1 pc |
| C |  | Allen Bolt M8X50mm | 6 pcs |
| D |  | Flat Washer M8 | 6 pcs |
| E |  | Flange Nut M8 | 6 pcs |
| F |  | Flat Washer M6 | 4 pcs |
| G |  | Self-Locking Nut M6 | 4 pcs |

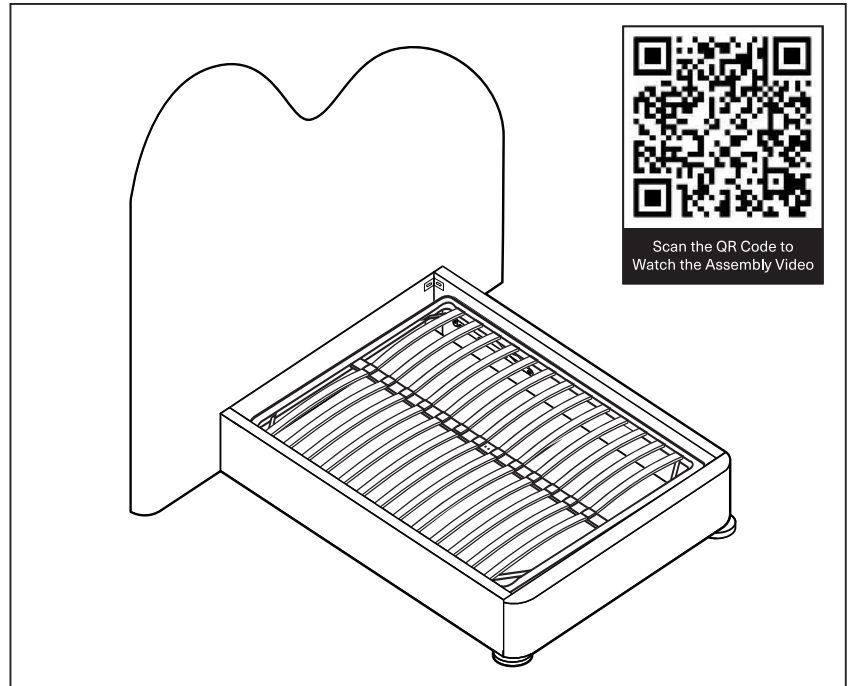

Note

The bolts (A)(C) are pre-installed on the bed head, side rails, footboard. Please unscrew them to assemble the bed.

Parts List

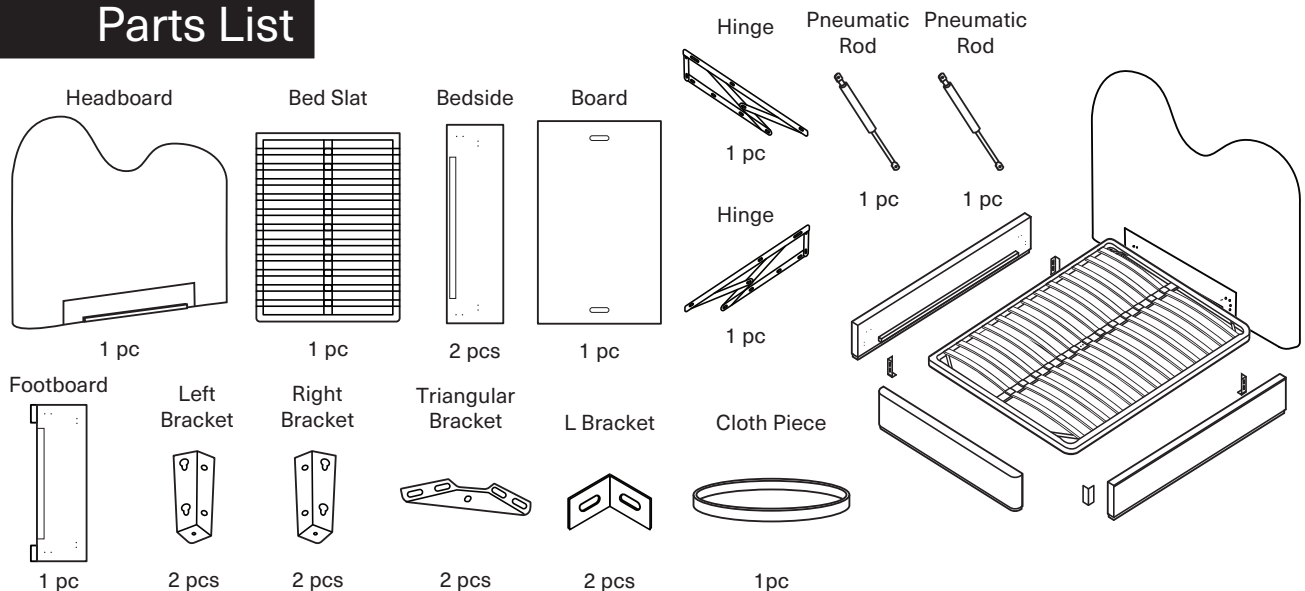

Note

1. Please check that all required hardware for assembly, as listed in the instructions, is available before beginning assembly.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Do not discard any packaging materials until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.
6. A drill may be used, but only on a LOW setting to avoid damage.

1




Unscrew all bolts (A) from the bed parts before assembly.



Footboard 2x

2




IMPORTANT: BRACKET ORIENTATION


Install each **Bottom Bracket** on its correct side of the bed frame. Ensure the keyhole-shaped openings align with the **Bedsides**. Do not interchange the bottom brackets.

Install each **Bottom Bracket** on its correct side of the bed frame. Ensure the keyhole-shaped openings align with the **Bedsides**. Do not interchange the bottom brackets.



3

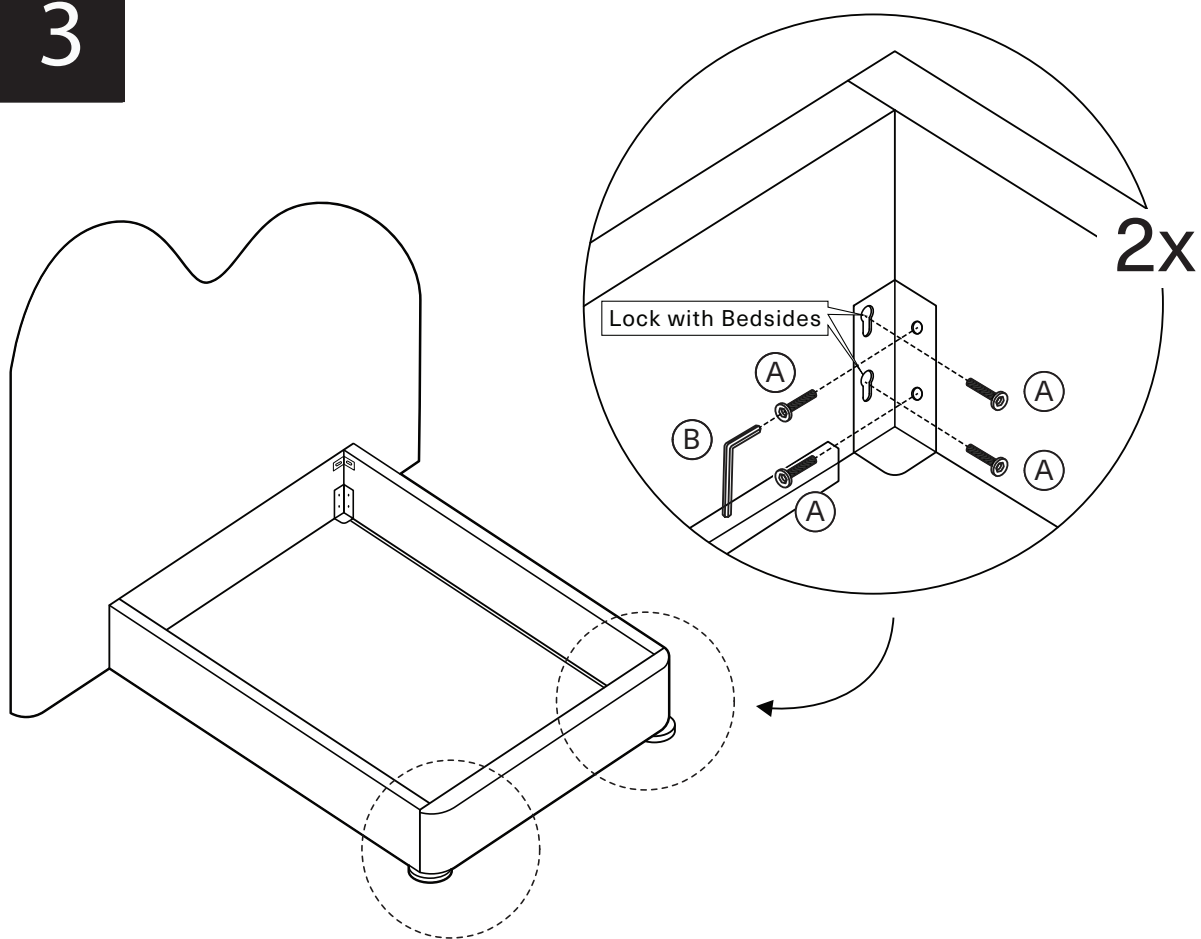



4

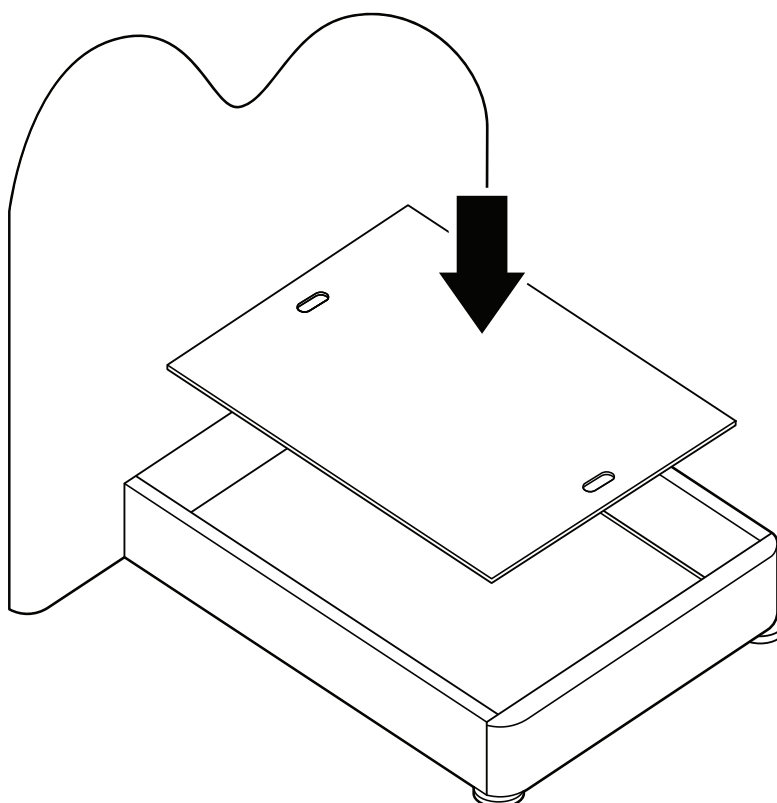


5

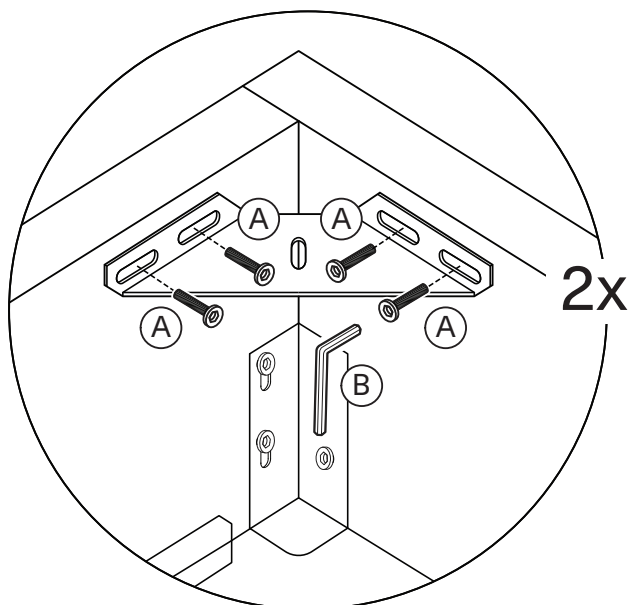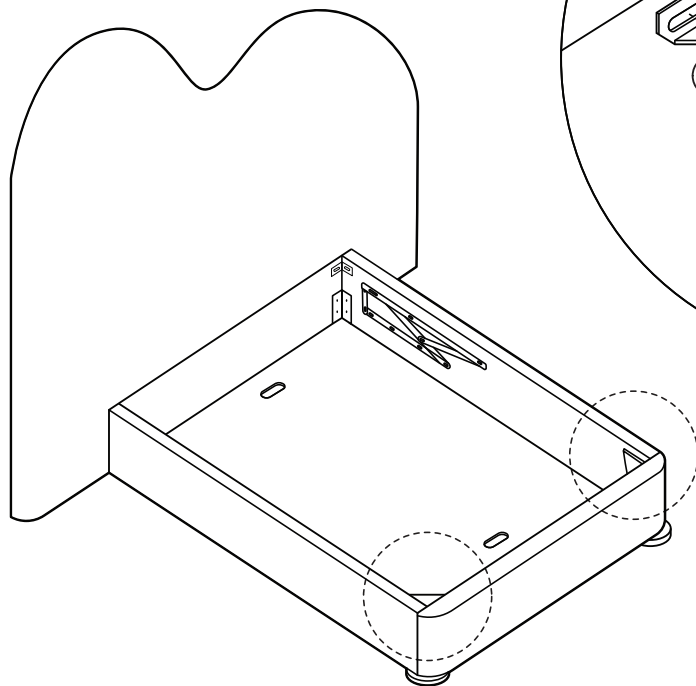


6

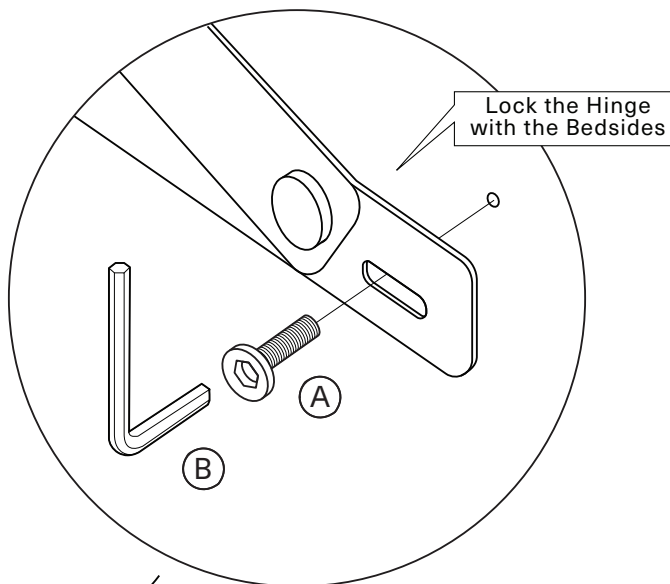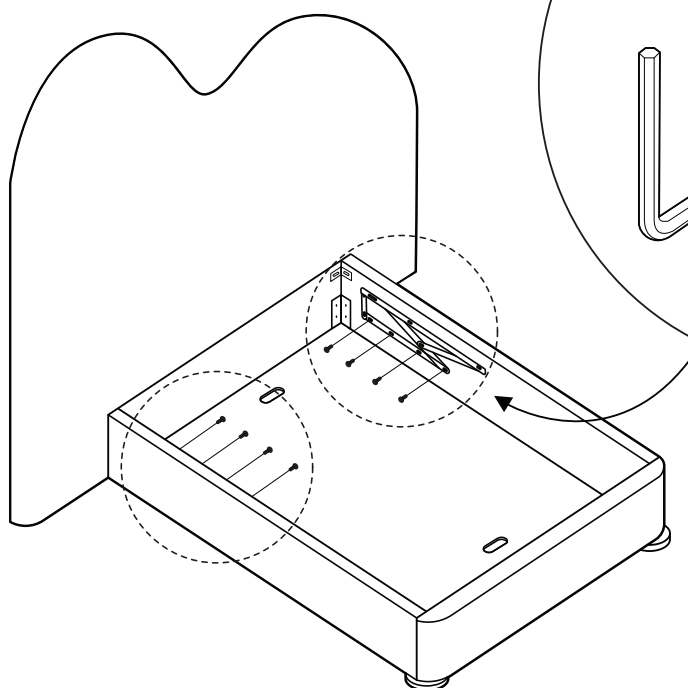


7

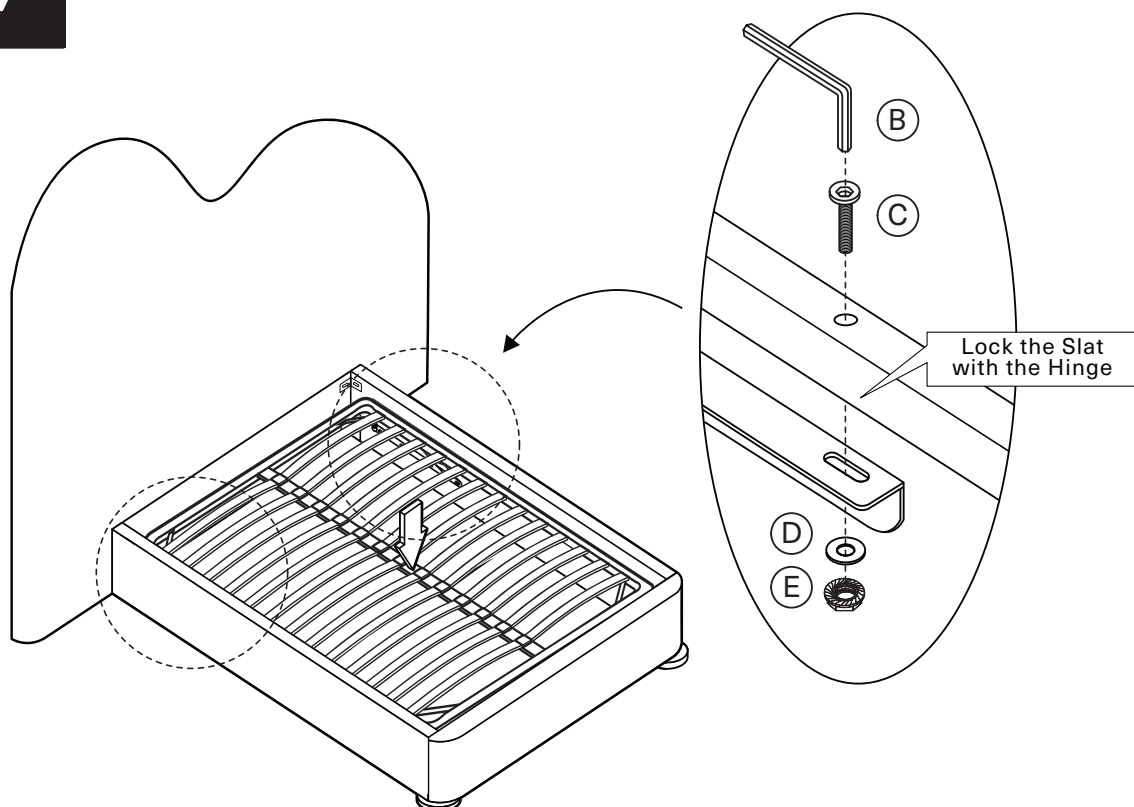

8

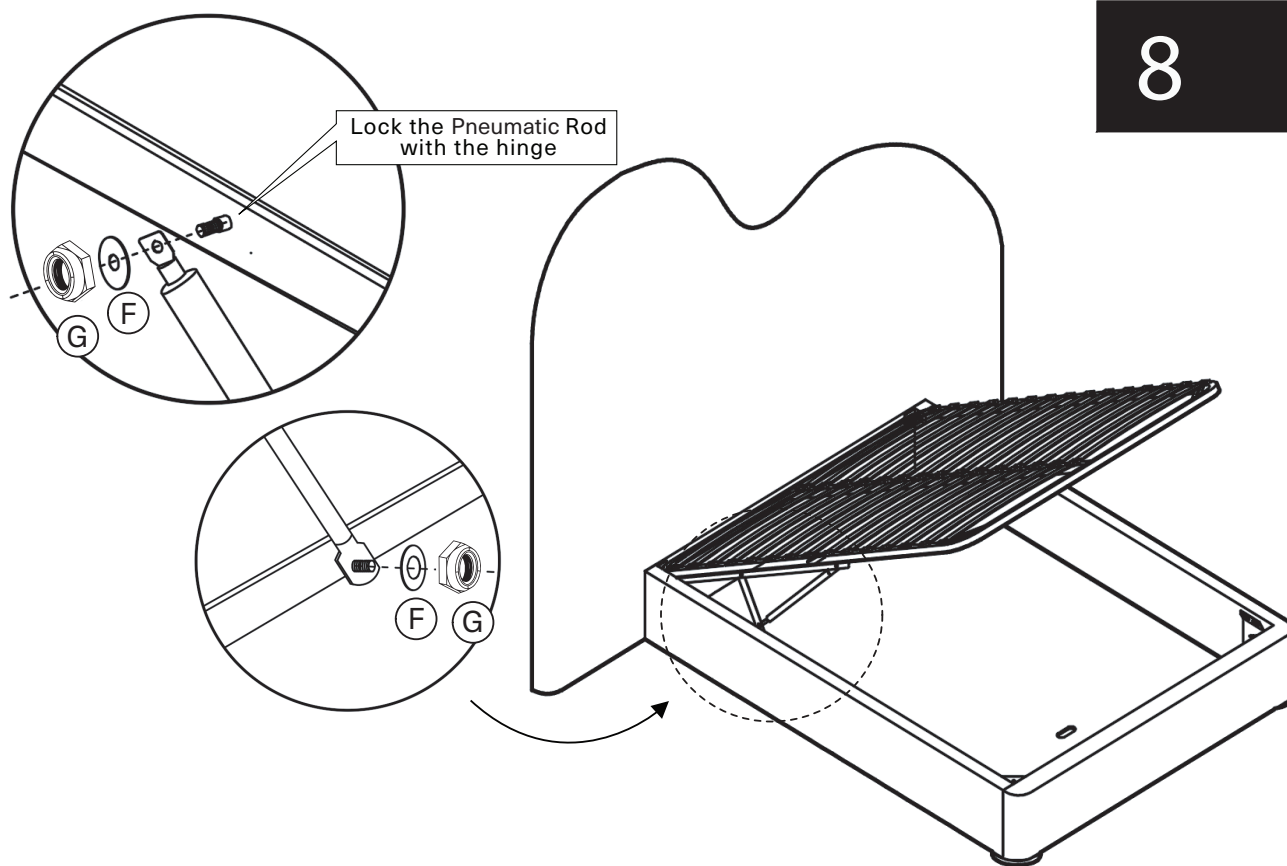

9

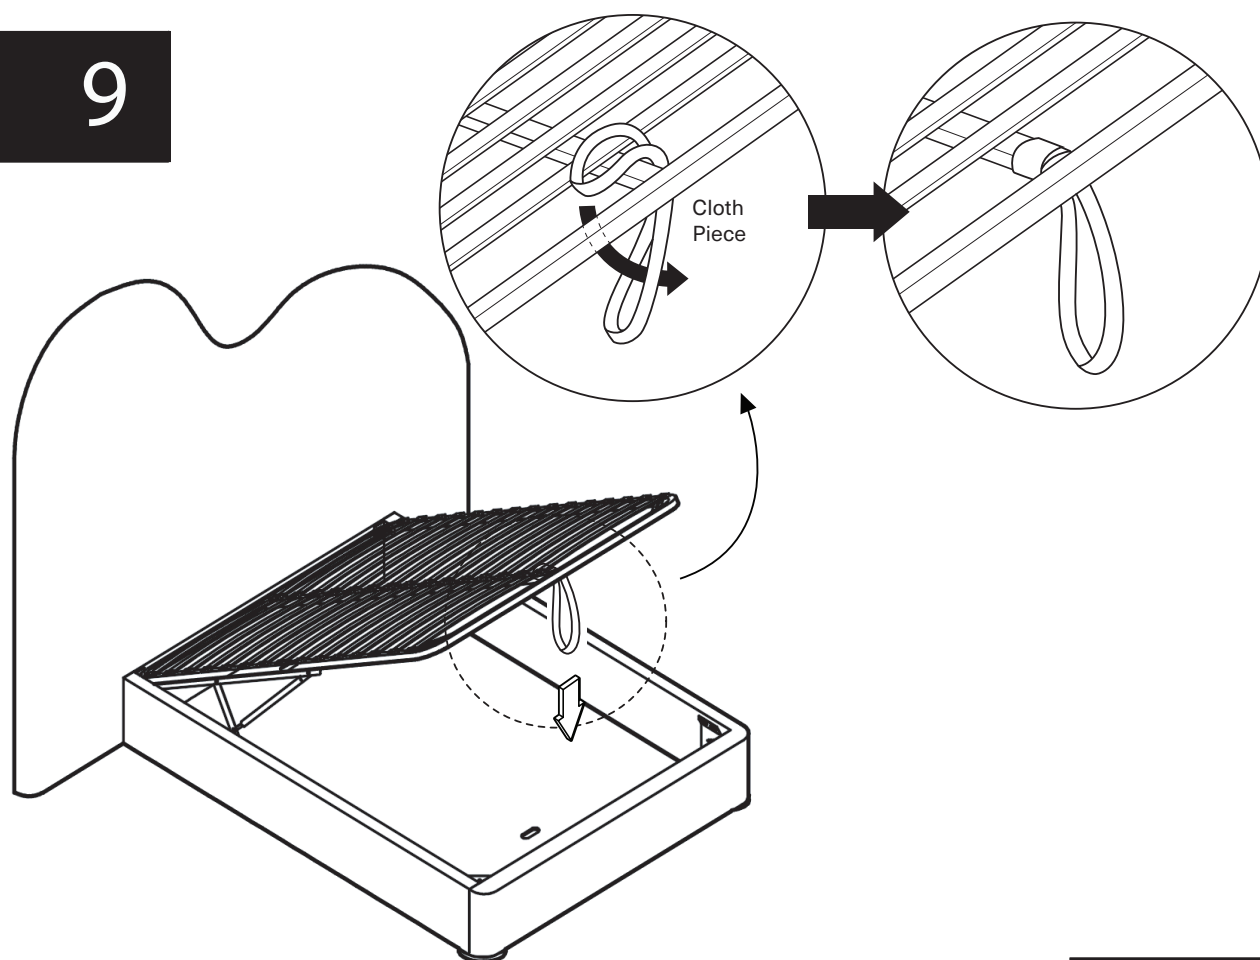

10

