




KOALA

L I V I N G

Assembly Instruction


Product Name: Clementine King/Queen Bed

Hardware List


A		Allen Bolt M8x35mm	48 pcs
B		Allen Key 5mm	1 pc
C		Allen Bolt M8x50mm	2 pcs
D		Washer M8x22mm	2 pcs
E		Nut M8	2 pcs

Note

Bolts are pre-installed on the headboard, bedside panels, and footboard.
Unscrew the bolts before assembly.

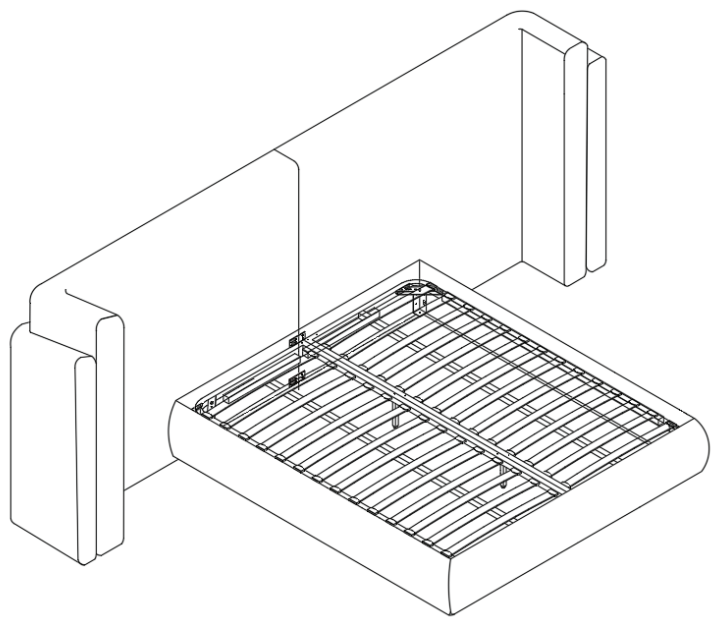


Parts List

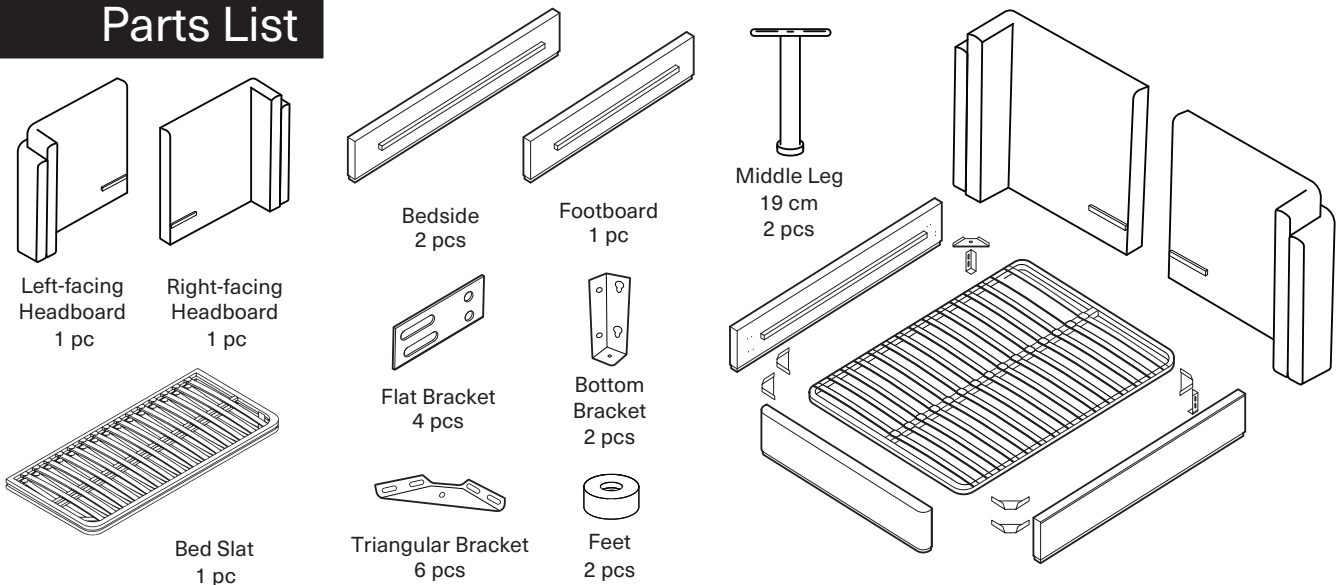


Note

1. Please check that all required hardware for assembly, as listed in the instructions, is available before beginning assembly.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Do not discard any packaging materials until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.
6. A drill may be used, but only on a LOW setting to avoid damage.


1

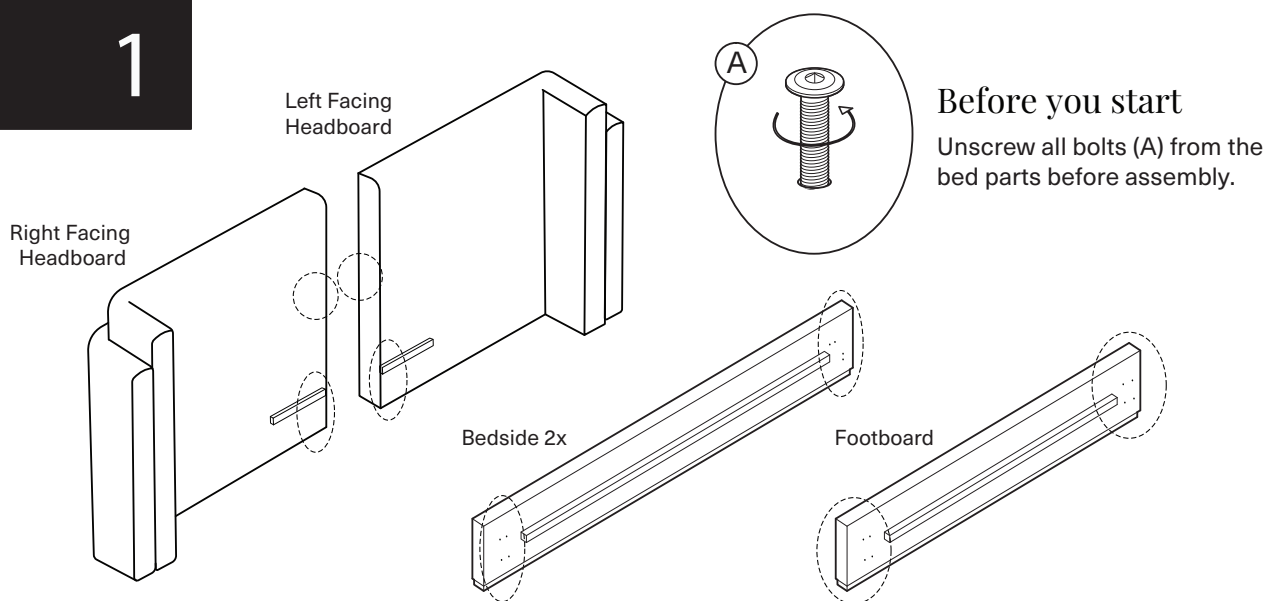


2

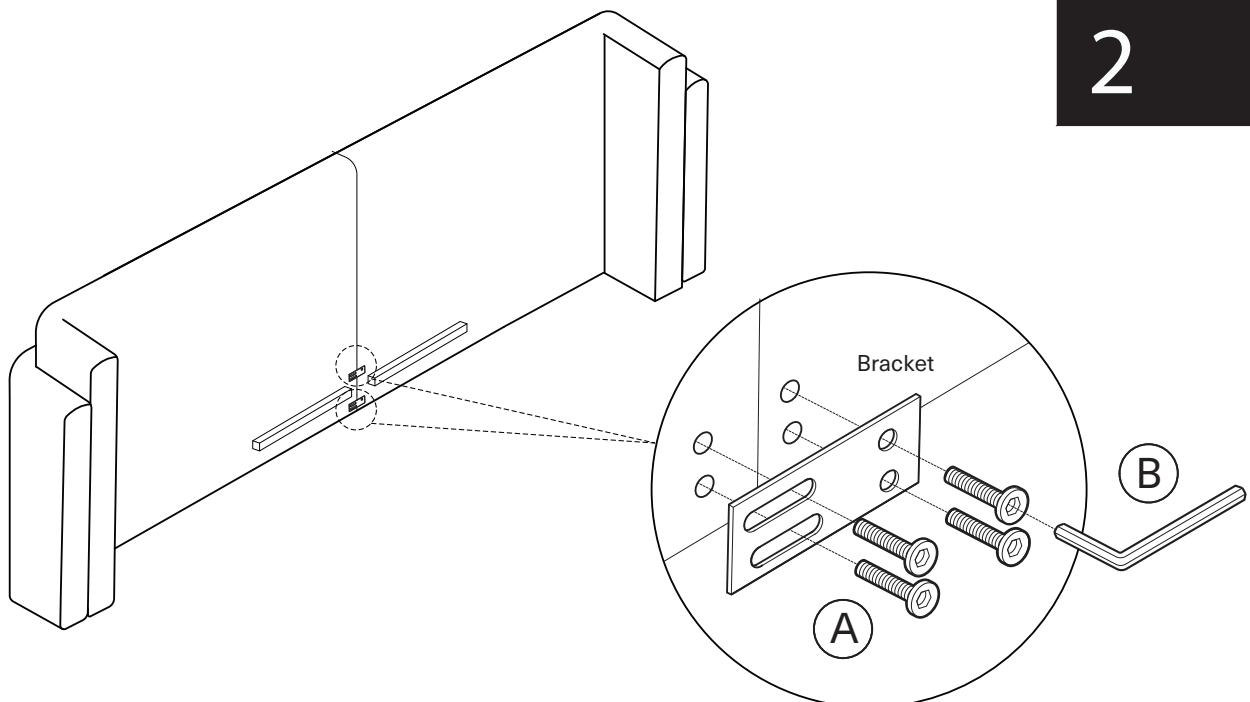

3

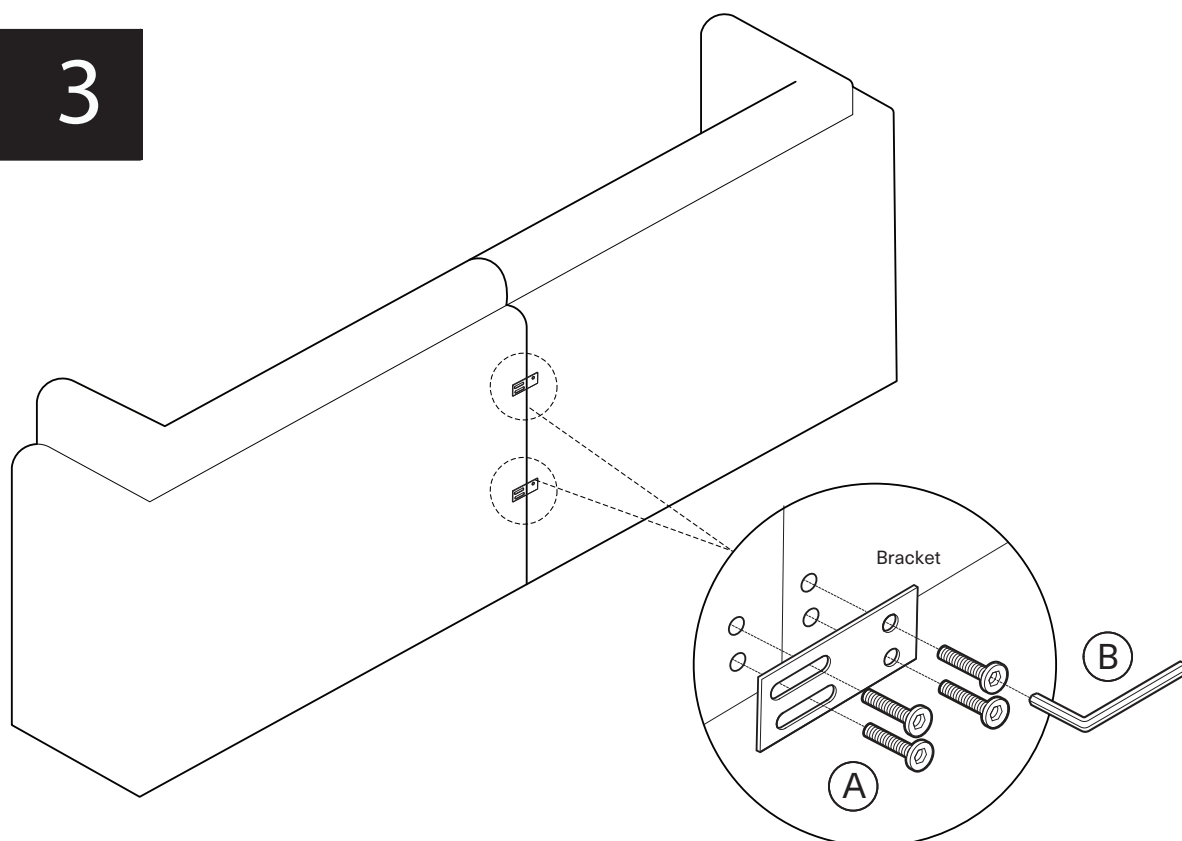


4

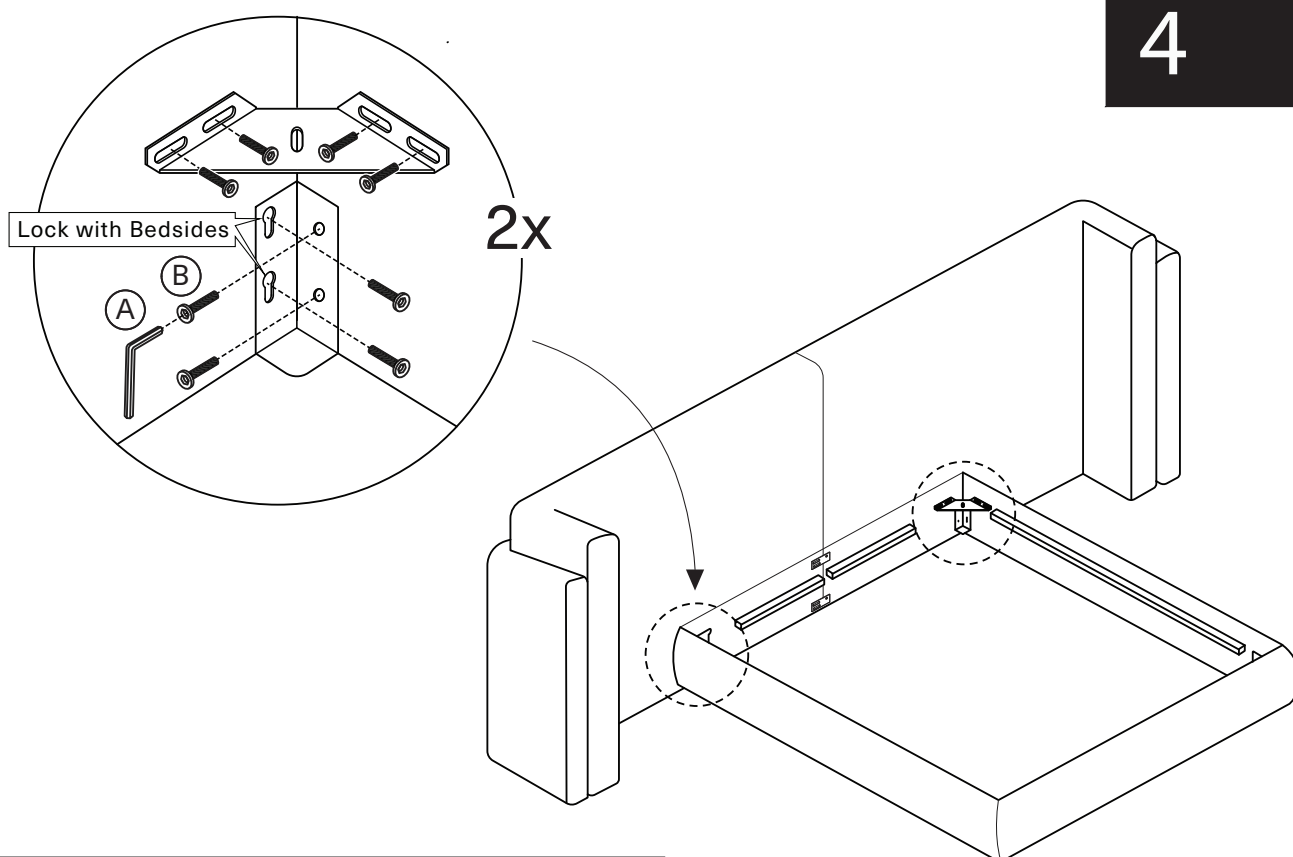


IMPORTANT: BRACKET ORIENTATION

Install each **Bottom Bracket** on its correct side of the bed frame. Ensure the keyhole-shaped openings align with the **Bedsides**. Do not interchange the bottom brackets.

5

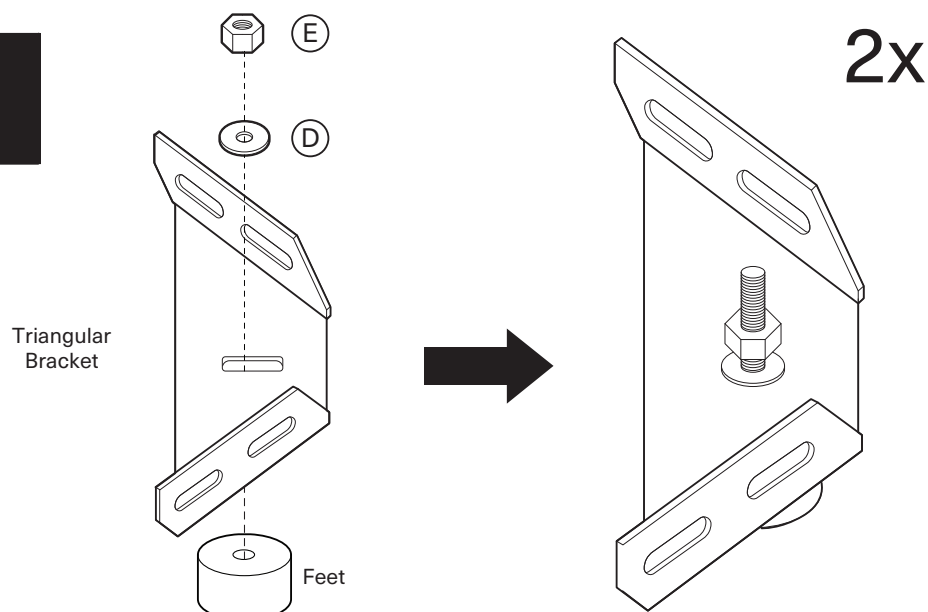

6

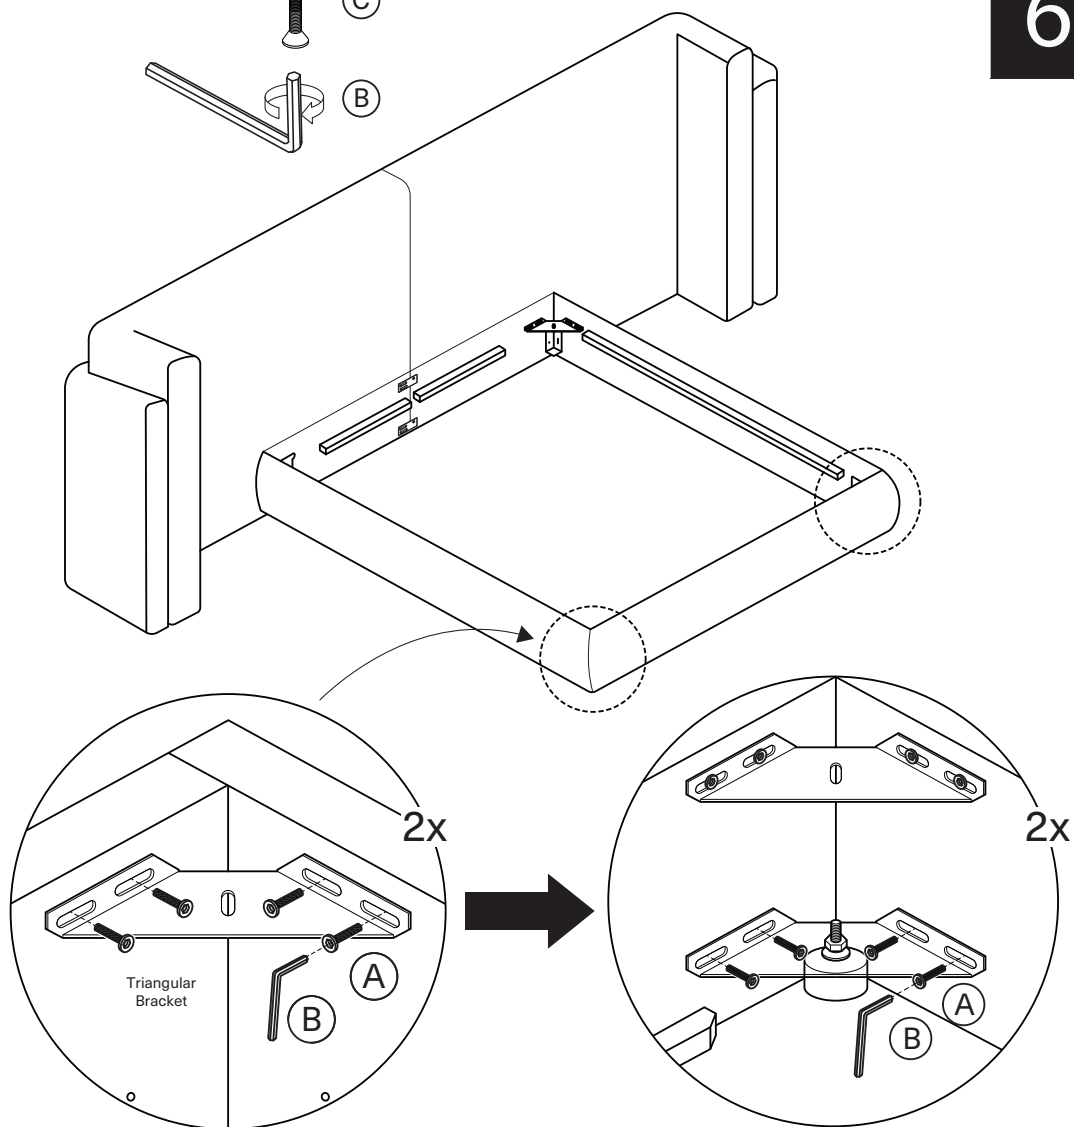

NOTE: Attach the footboard to the bedside using the brackets, keeping the bolts slightly loose. Align the 45-degree joints, then fully tighten the bolts.

7


Bed Slat Parts




Allen Bolt
M8X50mm - 4 pcs






Nut
M8 - 4 pcs

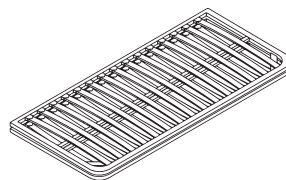

Foldable Bed Slat
1 pc




Middle Leg
2 pcs

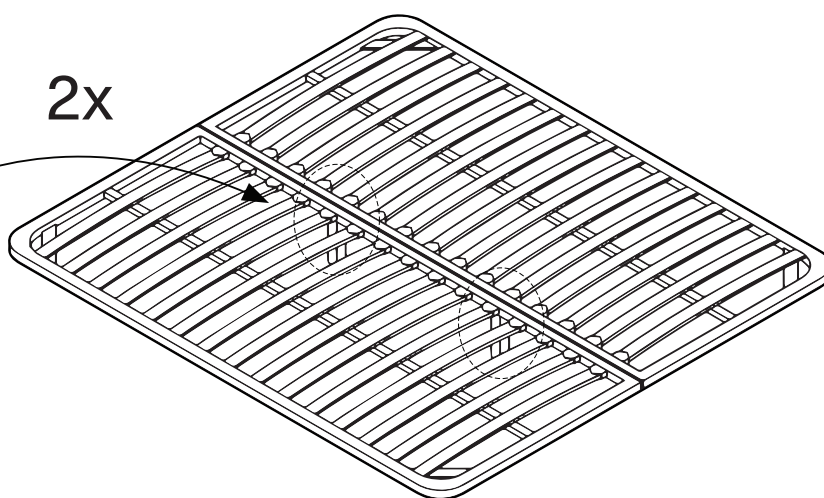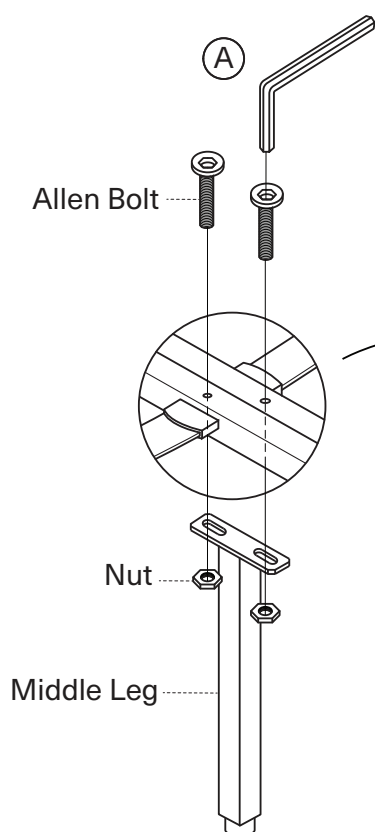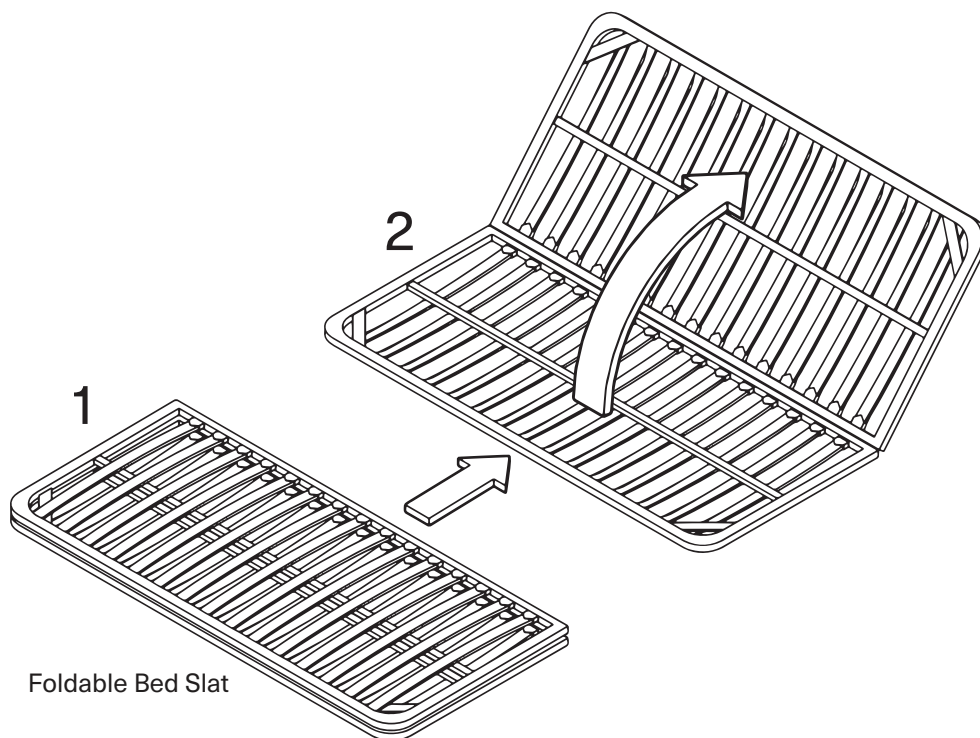

Allen Bolts are pre-installed on the Middle Leg.
Please unscrew them before assembly.

8

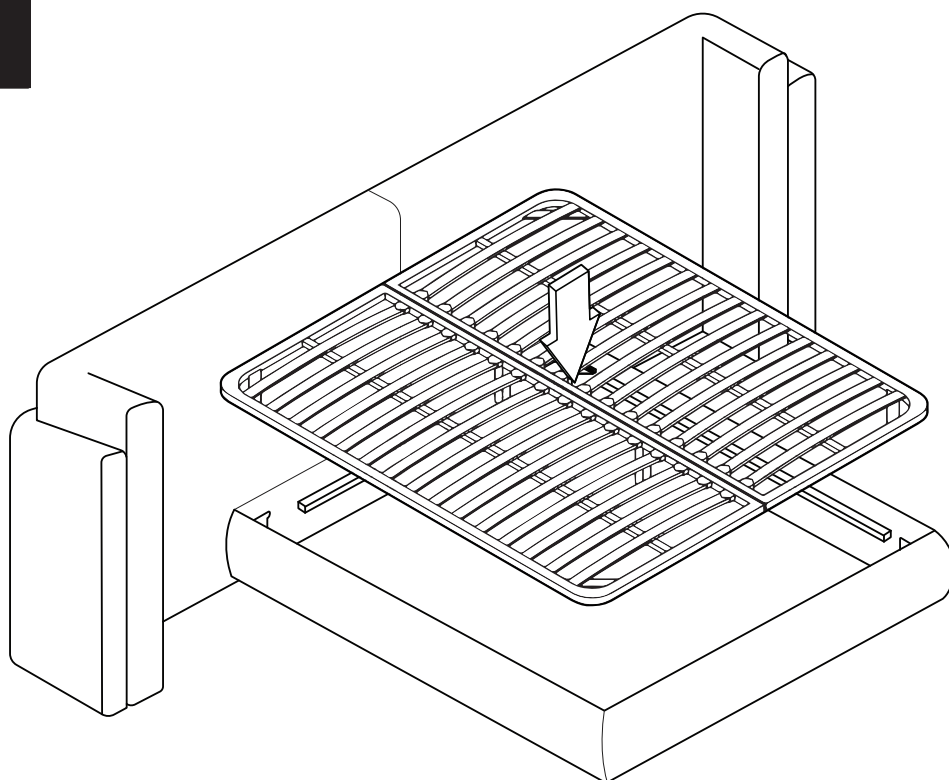

9

