

KOALA


L I V I N G

Assembly Instruction


Product Name: San Pierre Walnut Veneer Bedside Table
Travertine Finish Sintered Stone Top 60X50X59cm
Product Id: 129320

Hardware List

- A  Allen Key 4mm 1 pc
- B  Allen Bolt 6*35 6 pcs
- C  Washer 6*13 6 pcs

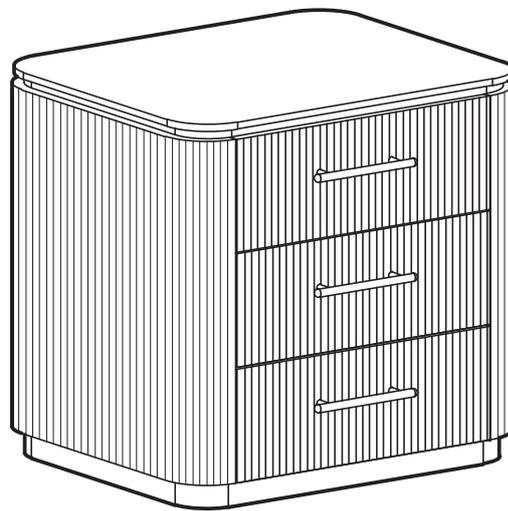



Part List

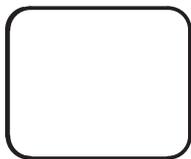

1 pc




3 pc

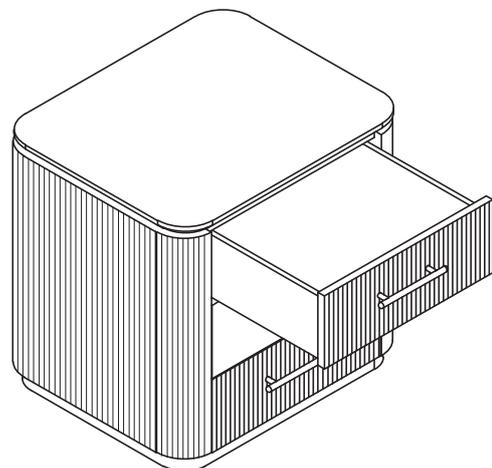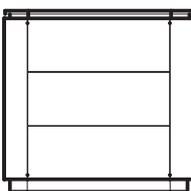

Note

1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.

1

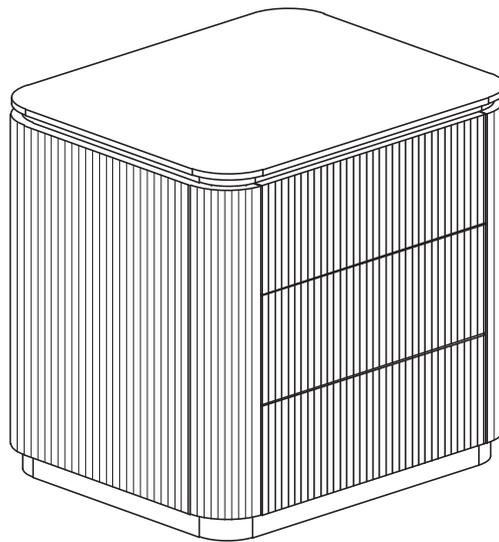

2

